



SWREC3

# Premium HD DASH CAM

## User Manual



**Please Note:** The internal battery for this Journey Recording Camera is for playback and storing the system settings only. The Camera must be powered with the 12v power cable supplied to record any journeys.


Please read and understand these instructions carefully before operating this HD Video Journey Recorder, and retain for future reference.

The machine is in addition to having the general function of vehicle traveling data recorder, there are four main features:

- (1) Full HD 1080p 30fps, high definition with night vision, HDMI output
- (2) quick lock video files or unlock function
- (3) Parking monitor function: Open the parking mode, then when the vehicle is turned off and an impact occurs the recording camera will automatically record a minute of video and save the file.
- (4) Built-in G-Sensor, records information at the point of impact, regarding braking and g-force information. The G-Sensor locks the video to avoid accidental over recording using the loop feature, (this function can be selected).

In order to better play to the maximum efficiency of the vehicle traveling data recorder, please read this manual carefully before use (the machine and accessories design and specifications are change, without prior notice).

## Product picture and Function

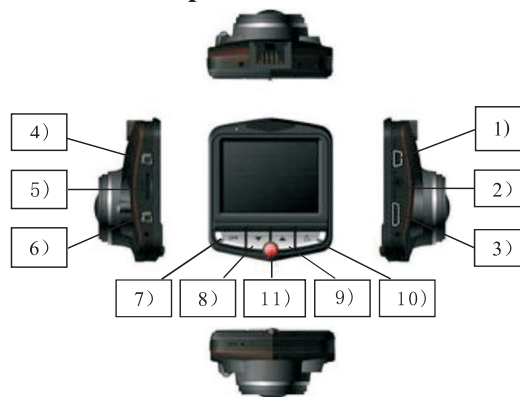

- 1) the USB interface    2) AV interface    3) HDMI interface    4) power button  
5) TF card slot    6) menu    7) OK Button    8)Down  
9)Up    10) mode button    11)parking function button

### Setting the functions

Turn on the DVR and press **Menu Button** under video mode or camera mode to enter into setting interface. Confirm by Ok Button and select by **Down/Up** for the following setting. Press **menu button** again to exit after finished.

### A. Video mode

Resolution :HD 1080P,720P,WVGA,VGA  
Loop recording : Off,2 Minutes,3 Minutes,5Minutes  
Exposure +2.0,+5/3,+4/3,+1.0,+2/3,+1/3,+0.0,-1/3,-2/3,-1.0,-4/3,-5/3,-2.0  
motion detection: Off, On  
record audio: Off, On  
date stamp: Off, On  
G-sensor: off, low, medium, high  
Date/time  
auto power off: OFF,3Minutes,5 Minutes,10Minutes  
beep sound: Off, On  
language:English/French/Spanish/Portuguese/Deutsch/Italian/simplified/traditional/Chinese/Russia/ Japanese/ Polski  
TV mode: NTSC,PAL  
Frequency: 50Hz,60Hz  
Irlred: Off, On  
screen saver: OFF,3Minutes,5 Minutes,10Minutes  
format: SD card, ALL date will be deleted, cancel ok  
default setting: Return menu setting to defaults, Cancel ok  
version: BSD-0330-2014-09-06-TV

### B. camera mode

capture mode: single 2S timer 10s timer  
resolution: 3M 2MHD VGA 1.3M 12M 10M 8M 5M  
sequence: Off, On  
quality: Fine Normal Economy  
sharpness: Strong Normal Soft  
white balance: Auto Daylight Cloudy Tungsten Fluorescent  
color: color, Black& White, Sepia  
iso: Auto,100,200,400  
exposure: +2.0,+5/3,+4/3,+1.0,+2/3,+1/3,+0.0,-1/3,-2/3,-1.0,-4/3,-5/3,-2.0  
anti-shaking: Off, On  
quick review: Off, 2 seconds, 5 seconds

date stamp: Off, Date, Date/Time

Date/time

auto power off: OFF,3Minutes,5 Minutes,10Minutes

beep sound: Off, On

language:English/French/Spanish/Portuguese/Deutsch/Italian/simplified/traditional/Chinese/Russia/ Japanese/ Polski

TV mode: NTSC,PAL

Frequency: 50Hz,60Hz

Irlred: Off, On

screen saver: OFF,3Minutes,5 Minutes,10Minutes

format: SD card, ALL date will be deleted, cancel ok

default setting: Return menu setting to defaults, Cancel ok

version: BSD-0330-2014-09-06-TV

### USB Mode

Connect DVR with computer by USB cable, (my computer) will occur removable disk, the file is stored at Removable Disk/DCIM/100DSCIM. At the moment, the file of the DVR can be downloaded to the computer.

Note:1)Please insert the SD/MMC card before recording.

2)This DVR records in cycle if you choose 2/5/15 minutes as storage time. When the storage medium is full, it will record from the beginning again and erase over the previously recorded material automatically. It will have 3 seconds pause time, and namely the contents in the 3 seconds will not recorded.

3)Because the DVR is DC5V input, please use the attached car charger. It have adaptor 12V/24V transfers to 5V already.

### Technical Specifications

The lens	Ultra wide Angle of 140 degrees
Options for language	English/French/Spanish/Portuguese/Deutsch/Italian/simplified/traditional Chinese/Russian/Japanese/Polски
Video,video format	H.264 MOV
TF card slot	Micro TF
Microphone/speaker	Built-in
Car power DC input	5V 1.5A
The battery	Built-in lithium polymer batteries
System requirements	Window 2000/XP/Vista/Window 7 and MAC OS * 10.3.6 above

### Attached Accessories

Manual Mount    USB Cable    Car Charger(Include the adaptor 12V/24V transfers to 5V)

### Operate

#### Installation:

The installation of this dvr is very easy,only need cover it onto the car mirror, connect the car charger to the car,and hide the cable ,that is ok.

#### two power options:

A. Supply by the internal Li-ion battery

(1)connect the USB car charger

(2)Connect to the computer by USB cable

When being charged,the light is green, and the green light will be off when the dvr is fully charged.

B. Supply by the car power 12V

When the car turns on,the dvr will be start recording automatically; it will save the video files and turn off 15 seconds after the car is power off

*NOTE: the car dvr only can work under 5V voltage, if we want to close the DVR we have to long pree the on/off key or cut off the power .*

### Recording

DVR will enter into defaulted recording mode when turn it on, the work indicator blinks and indicates it is recording. The recording file is saved in the SD/MMC Card. To stop, press **7)OK Button** or ending when car stops, the work indicator won't blink.

### Camera mode

Turn on the DVR and press **10)mode button** to enter into camera mode. To enter into camera mode. To take photo by pressing **7) OK Button**.

### Previews and Delete

Turn on the DVR and press **10)Mode button** twice to enter into preview mode, press **8)Down** or **9)Up** to select the previewed file. If it is video file, it can play or stop by pressing **7)OK Button**.

If you want to delete it, under the preview mode, press **6)Menu Button** to enter into delete mode, and then, select delete current/ delete all and **Down/Up** and confirm to delete the file by press ok button, also can select thumbnail mode and volume (from 1 to 8) under the preview mode



### Product Specifications

The image sensor	AR0330, 3.0 Megapixel COMS sensor
display	2.4 inch HD display
The lens	A+6G glass high-resolution multi-layer filter wide Angle lens
Video specifications	H.264 MOV
Image format	JPEG
Video output	AV output HDMI hd output
Transmission speed	USB2.0

The Journey Recording Camera is similar to a computer, if the camera freezes during operation use the following procedure to reset the Camera.

Insert a paper clip or other suitable object into the RESET hole, and wait for the Camera to activate again.

**WARRANTY:** The 12 month warranty on this product will need to be activated within 30 days of purchase, please go to our website and click on the "Warranty" link and enter your details on the warranty screen. [www.streetwizeaccessories.com](http://www.streetwizeaccessories.com).

#### Streetwize Accessories:

Unit 1, Royce Trading Estate, Ashburton Road West, Trafford Park, Manchester M17 1RY

**Sales enquiries:** [sales@streetwizeaccessories.com](mailto:sales@streetwizeaccessories.com)

**Technical enquiries:** [support@streetwizeaccessories.com](mailto:support@streetwizeaccessories.com)  
0161 447 8597

[www.streetwizeaccessories.com](http://www.streetwizeaccessories.com)

