



LW638 - Red  
LW639 - Black

# Portable Butane Cabinet Heater



**Read and understand these instructions before attempting any operation of this heater and retain for future reference!**



## **WARNING.**

1. Read these instructions before using this appliance.
2. Use an approved regulator which is adjusted to the gas supply pressure required, (NOT supplied).
3. Do not keep pressing the ignition button for more than 40 seconds.
4. Never disconnect the regulator while container valve is open.
5. Do not change gas cylinder in any areas which contain an open flame.
6. Do not expose your container to extreme heat.
7. Do not locate any other container within the space which the heater is used.
8. Do not insert your finger or any other material through the front panel of the heater.
9. Leave at least 1 metre distance between your heater and any other heat source.
10. Do not let unauthorized persons interfere with your heater.
11. Do not place appliance under socket outlet.
12. Don't use the heater in basements, bathrooms or bedrooms.
13. This heater must not be used without a gas container fitted for stability purposes.
14. Do not cover your heater.
15. Fabrics, clothing, hangings, net curtains, bed linens and other flammable materials may ignite if placed against the outlets of your heater.
16. In the event of a leak, the appliance valve should be turned off and the regulator disconnected from the container.
17. After use, turn off the appliance at the gas valve.
18. Only use in a well ventilated area.

## **STORAGE**

1. Disconnect container.
2. Store container in a well-ventilated area away from combustible material. Storage should preferably be in an outhouse but must not be in a basement or high-rise flat.
3. The heater should be covered in a dry, dust-free sheet or in its original packaging.

## **CLEANING**

1. Use a damp cloth (not wet) with a solution of soapy water to clean the exterior and container storage area of your heater.
2. Make sure that no water gets onto the burners or pilot/light area. Wipe the heater completely dry before use.
3. Do not use abrasive cleaners as they may damage the quality paint finish.

## **MAINTENANCE**

1. Check flexible tube between regulator and heater before every operation and replace it if perished, worn or damaged. In any case consider its expiration date to replace the tube
2. It is recommended that the heater is maintained each year by authorized personnel.



1. Ignition Button
2. Control Button
3. Carrying handles.
4. Guard.
5. Atmospheric sensing device, pilot with flame supervision device and ignition system.



## **CONNECTING THE GAS TANK**

1. Use an approved regulator according to gas supply pressure and approved tubing supplied with a length of 50cm and no longer than 100cm. When connecting the regulator to the container avoid twisting of hose.
2. Slowly open the valve of the container and check if there is any gas leakage by brushing the connections with soapy water. NEVER USE A MATCH! Any gas leakage will form bubbles. In the event of gas leakage the appliance should be turned off by closing the valve and the regulator disconnected from the bottle. Place container in its proper space and attach the rear cover.


## **HOW TO CHANGE LPG CONTAINER**

1. Container must be replaced in a flame-free atmosphere.
2. Do not smoke while changing the container.
3. When you needed to replace your empty container, turn off gas container's valve.
4. Make sure that the heater is extinguished completely.
5. Remove the regulator from the empty container.
6. Following the steps described in "Connecting the gas tank" to connect a filled one.


## **IMPORTANT**

1. It is important that all gas connections have been correctly connected to prevent any leakage.
2. Put gas tank in an upright position. Using the gas tank horizontally may damage your heater and create serious problems.
3. If a newly fitted gas tank is used, ignition may be impaired as there may be some inert gas present in the container. In this case, change the gas tank with another which is partially used.
4. When you light your heater for the first time or if it has not been used in a long time. Please note; try to light the heater in open air (garden or balcony). Take your heater inside after 15 minutes operation.
5. Do not use your heater while sleeping. Do not use your heater in high-rise flats. Do not use your heater in basements, bathrooms or bedrooms.
6. This appliance requires a hose (supplied) and a regulator (NOT supplied), check with your gas supplier. The guard on the appliance is to prevent risk of fire or injury from burns and no part of it should be permanently removed.


## CONTROL BUTTON:

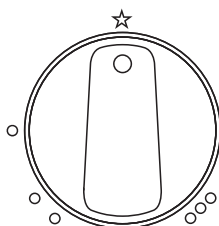


Ignition Position

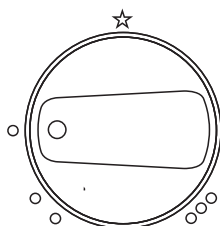

Minimum Position

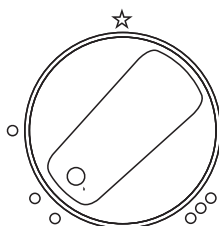

Medium Position

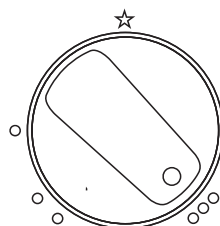

Maximum Position

## IGNITION INSTRUCTIONS

### 1. BUTTON POSITIONS:

A. The heater has an ignition setting & 3 gas settings.

Ignition position (☆); Minimum position (○); Medium position (○○); Maximum position (○○○);

B. Turn on the gas supply on the gas tank.

### 2. LIGHTING:

Using one hand Press down the control button for 10 seconds at the position (☆), at the same time press down the piezo igniter key (next to the control button) with thumb of the opposite hand. Continue this procedure until pilot has ignited. Approximately 20 seconds later slowly release the control button. If the pilot is ignited, it means that the heater is at its minimum position (○). If pilot flame goes out, please repeat procedure.

### 3. HEAT LEVEL SETTINGS:

To change from minimum to medium. Please gently press down the control button and turn it to position (○○). To change from medium to maximum. Please gently press down the control button and turn it to position (○○○).

### 4. SWITCHING OFF:

Please gently press down the control button and turn to position (☆). Turn off the gas supply on the gas tank. If the heater will not be used for a period of time, please disconnect the regulator from the gas tank and replace any valve protection plug or cover. If the heater fails to extinguish, please do not disconnect the regulator from the container and remove the heater outdoors and let the gas in the container empty.

## PLEASE NOTE:

Please be sure the control button has been locked after changing it's position. Control button can't be turned if you haven't pressed it down to turn.


## SAFETY PRECAUTIONS:




1. Always use Heater in accordance with user's instructions supplied with each heater. Keep this instructions in a safe place.




2. DO NOT place clothes or other material on the heater. As apart from danger of fire, their presence could affect the efficiency of the appliance.

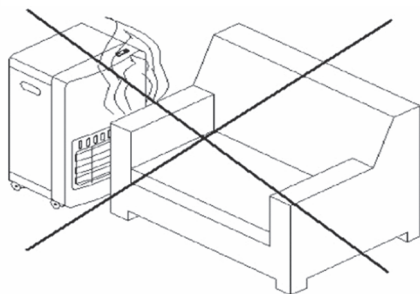


3. DO NOT position Heater close to armchairs , fabrics, bed linen and other furniture.

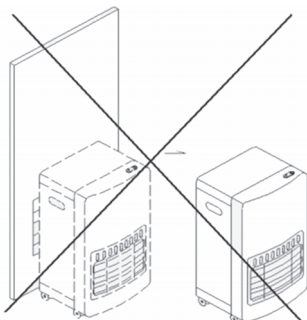

4. DO NOT move Heater from room to room when operating.

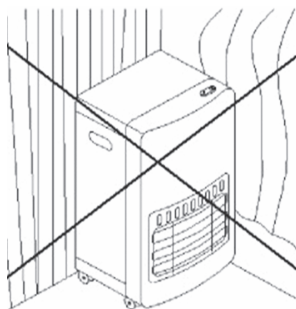

5. DO NOT position the heater alongside a wall or near curtains and other flammable materials. The following minimum distances should be used: 20cm from sides, 150cm from front. ALWAYS face heater towards center of room. placing on a surface where it can twist on its castors if knocked by a child or dog etc.

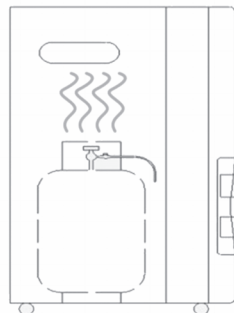

6. In the event of gas leakage. Extinguish all naked flames. turn off the heater's gas supply. DO NOT disconnect the regulator. Check all connections. Slowly turn the gas on and brush the connections with soapy water, any gas leak point will form bubbles. If a leak is found, turn the gas OFF and inform your gas supplier. DO NOT use the heater until it has been checked & maintained by a qualified engineer.

**NOTE: READ THE INSTRUCTIONS BEFORE USING THIS APPLIANCE. VENTILATION: USE ONLY IN A WELL-VENTILATED ROOM. DO NOT CHANGE GAS CYLINDER IN THE PRESENCE OF NAKED flames.**

THIS APPLIANCE REQUIRES INSTALLATION BY A COMPETENT PERSON THIS APPLIANCE REQUIRES AN APPROVED HOSE AND REGULATOR CHECK WITH YOUR GAS SUPPLIER.

## FAULT FINDLING CHART

SYMPTOMS	FAULT	REMEDY
1. Pilot will not light automatically.	No spark across electrode gap.	(a) Ensure that pizeo-electric igniter is functioning correctly. (b) Check that electrical lead is not damaged.
2. Pilot will not light automatically but points (a) to (e) are satisfactory and the pilot will light with a match.	Incorrect position of spark in relation to pilot gas flow.	Re-position spark plug so that spark jumps across gas flow.
3. Heater will not remain alight when pressure is released from ignition button.	Electro-magnetic valve closes whilst heater is alight.	(c) Ensure that thermocouple probe is located in pilot flame. (d) Ensure good connection between thermocouple and valve. (e) Check thermocouple. (f) Check electromagnetic valve.(by gas engineer).
4. After changing to maximum position with all three plaques alight. One or more plaques appear below normal intensity.	(a) Blocked jets. (b) Partially blocked supply tube.	(a) Remove and clean blocked jet. (b) Remove supply tube, remove jets and blow through the tube.
5. Difficulty in cross lighting from position 1 to position 2 or 3.	(a) Air draught directed away from first plaque. (b) Position of the pilot flame.	(a) Change the location of the appliance so that it is not adversely affected by air draught. (b) Position pilot so that flame impinges across bottom corner of 2nd plaque as well as 1st plaque.
6. Smell of combustion.	Missing piece of ceramic fireclay.	Inspect perimeter of each plaque and locate place where some fireclay has been displaced. Check with qualified engineer.



### Specifications:

Heat Load: 1.4Kw (min), 2.8Kw (mid), 4.2Kw (max).

Heating Area: 60 cubic metres.

Gas Consumption: 110g/hr (min), 200g/hr (mid), 305g/hr (max).

Gas flameout, ODS & Anti-tilt safety features.

Piezo electric ignition switch.

3 Pce ceramic heating plates with safety grill.

Includes hose & clips (x2).

**Please Note: This Portable Butane Cabinet Heater is NOT supplied with a regulator. These are available from most Butane gas suppliers.**

LW638 - Red

Gas Type: Butane

Gas Pressure: 28-35 mBar

Quantity: 1 Pce

Weight: 8.5 Kg

Product dimensions: 425mm (W) x 390mm (D) x 730mm (H)

**Please Note: Do NOT dispose of the packaging until you are completely satisfied with the product.**

**WARRANTY:** The 12 month warranty on this product will need to be activated within 30 days of purchase, please go to our web site and click on the "Warranty" link and enter your details on the warranty screen. [www.streetwizeaccessories.com](http://www.streetwizeaccessories.com).

#### Streetwize Accessories:

Unit 1, Royce Trading Estate, Ashburton Road West,  
Trafford Park, Manchester M17 1RY

**Sales enquiries:** [sales@streetwizeaccessories.com](mailto:sales@streetwizeaccessories.com)

**Technical enquiries:** [support@streetwizeaccessories.com](mailto:support@streetwizeaccessories.com)

**Telephone:** 0161 447 8597

[www.streetwizeaccessories.com](http://www.streetwizeaccessories.com)



M17 1RY