

- c) Store idle power tools out of the reach of children and don't allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- d) Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tools operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

## **One - Year Limited Warranty**

This limited warranty does not cover any damage due to accident, misuse, abuse or negligence. The limited warranty is non-transferable and does not effect statutory rights.

If there is any problem with this product, you MUST return it to the original place of purchase along with your sales receipt in order for the shop to inspect the product. If the product is found to be defective the shop can replace the product covered by the 12 month limited warranty at their discretion.

# **Washing Instructions**



- 1. Place in the washing machine or wash by hand.
- 2. Allow the bonnets to dry thoroughly before storing.
- 3. Store in a dry place.

#### **Streetwize Accessories:**

Unit 1, Royce Trading Estate, Ashburton Road West,Trafford Park, Manchester M17 1RY

#### Sales enquiries:

sales@streetwizeaccessories.com

#### Technical enquiries:

support@streetwizeaccessories.com www.streetwizeaccessories.com

# 240V 10" Orbital Car Polisher



## SWCP1













TO PREVENT DAMAGE AND THE RISK OF FIRE, ELECTROCUTION OR INJURY, PLEASE READ AND OBSERVE THE FOLLOWING SAFETY INSTRUCTIONS BEFORE USING THE POLISHING MACHINE.

# **SAFETY INSTRUCTIONS**

- Use the polishing machine only in a clean and dry environment.
- The polishing machine should be placed on the polishing surface before being switched on or off.
- Keep children away by taking the appropriate precautions.
- Ensure the switch is in the off-positions before plugging in. Avoid switching on the machine on inadvertently.
- Do not keep your finger on the switch when carrying the connected polishing machine from one place to another.
- Always unplug at the mains before changing the polishing cap or carrying out repairs.
- Never carry or pull the machine by its power cable.
- Protect the cable from heat, oil and sharp edges.
- Check the cable for breaks before each use.
- Do not exert too much pressure when polishing, but simply allow the polishing machine to glide over the polishing surface.
- Check the housing and switch for damage.
- Do not use the polishing machine if the housing or switch is defective.
- The A-weighted equivalent continuous sound pressure level at the user's ear lies below 70 dB(A).

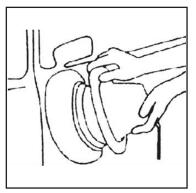

 Work next on the smaller surfaces (doors, for example).
 Allow the mains cable to hang from the appliance and hold the polishing machine as illustrated.

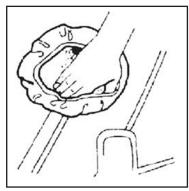

 For less accessible areas (such as wing-mirrors, bumpers and door handles etc) remove the polishing cap from the pad and polish these areas by hand.



 Now replace the textile polishing cap with the fine polishing cap and pull this over the polishing pad. Make sure it is completely clean. Remove the layer of polish in the same order as it was applied.

WHEN USING ANY WAX AND POLISHES, PLEASE OBSERVE THE MANUFACTURER'S INSTRUCTIONS.






## **INSTRUCTIONS FOR USE**


#### **IMPORTANT SAFETY PRECAUTIONS:**

IT IS ESSENTIAL TO ENSURE THE POLISHING & BUFFING CAPS ARE COMPLETELY CLEAN AND FREE FROM ANY DIRT OR GRIT.

ALLOW THE POLISHING MACHINE TO GLIDE OVER THE POLISHING SURFACE. DO NOT EXERT PRESSURE!

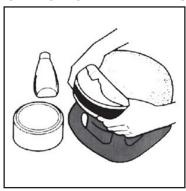

 Pull the textile polishing cap over the polishing pad. The pads are designed to fit tightly, it is essential that time is taken to fit the pad correctly.

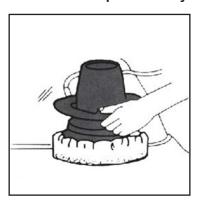

 Switch the polishing machine on and off only when the polishing machine is resting on the polishing surface.



Spread the polishing paste over the polishing pad. Do not apply the polish directly to the polishing surface.



 Place the extension lead over your shoulder and work first on the large. Fiat surfaces such as the bonnet, boot lid and roof. Keeping your movements as regular as possible.

# MAINTENANCE AND CARE

- Wash the polishing cap only by hand and hang up to dry.
- When not in use, remove the polishing cap and store the polishing machine upside down so that the polishing pad can dry and retain its original shape.
- The excessive use of wax and paste can cause the polishing cap to jump off the polishing pad while polishing.
- Use only a mild soap and damp cloth to clean the polishing cap.

**IMPORTANT! DO NOT USE ANY ABRASIVE POLISHING AGENTS** 

# **CARE TIPS**

- For optimum paintwork protection, you should polish your car 2 to 3 times per year.
- Wash your car at least every 2 weeks. Avoid using household detergents as these can damage the paintwork and remove the layer of wax.
- Wash your car with a clean sponge, working from top to bottom.
- Remove all insects, bird droppings and tar stains from the paintwork daily.
- If you use any window-cleaning agents, spray them onto a cloth and not directly onto the windows in order to prevent them wetting the paintwork.

## **TECHNICAL DATA**

Voltage: 240V

Power Rating: 120W

Speed: 3500rpm

Polishing Pad: 240mm-diamiter





# **GENERAL SAFETY INSTRUCTIONS**

WARNING! Read all instructions. Failure to follow instructions listed below may result in electric shock, fire and / or serious personal injury. The term "POWER TOOL" in all of the warnings listed below refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

#### **SAVE THESE INSTRUCTIONS**

## 1.WORK AREA

- a) keep work area clean and well lit. Cluttered and dark areas invite accidents.
- b) Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust & fumes.
- c) Keep children and bystanders away while operating a power tool. Distractions can cause you to loose control.

## 2.ELECTRICAL SAFETY

- a) Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adaptor plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- c) Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- d) Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.

e) When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.

### 3.PERSONAL SAFETY

- a) Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- b) Dress properly and use safety equipment. Don't wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Safety equipment such as dust masks, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c) Avoid accidental starting. Ensure the switch is in the off-position before plugging in. Carrying power tools with your finger on the switch or plugging in power tools that have the switch on invites accidents.
- d) Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e) Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- f) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of these devices can reduce dust related hazards.

## **4.POWER TOOL USE AND CARE**

- a) Do not force tool. Use the correct power tool for your application. The correct power will do the job better and safer at the rate for which it was designed.
- b) Do not use the power tool if the switch does not turn on or off. Any power tool that can not be controlled with the switch is dangerous and must be repaired.