



Foldable Travel Kettle

Information For Use



Streetwize: Ashburton Road West, Trafford Park, Manchester M17 1RY

www.streetwizeaccessories.com

For product support:

E: support@streetwizeaccessories.com

T: +44 (0)161 447 8597

For trade enquiries:

E: sales@streetwizeaccessories.com

T: +44 (0)161 447 8580

For spare parts:

E: spareparts@streetwizeaccessories.com



Contents

Intention For Use	2
Product Elements	3
Health and Safety Guidelines	4
Unfolding/Folding The Kettle	5
Unfolding The Kettle	5
Folding The Kettle	5
On First Use	5
Operating Instructions	5-7
Automatic Reboil Function	6
Boil-Dry Protect	6
Care & Maintenance	6
Cleaning	6
Before Cleaning	6
Cleaning the kettle's interior	6
Cleaning the kettle's exterior	6
After Use & Storage	7
Technical Support	7
Technical Specification	7


Intention For Use

Thank you for purchasing this Foldable Travel Kettle from Leisurewize. This kettle folds inwards to save space for when travelling. It is perfect for caravan/motorhome/campervan holiday makers; and also suitable for people who travel abroad.

This appliance is also suitable for staff kitchen areas in shops, offices and other working environments. It is suitable for customers who stay in hotels, motels & bed & breakfasts.



Product Elements

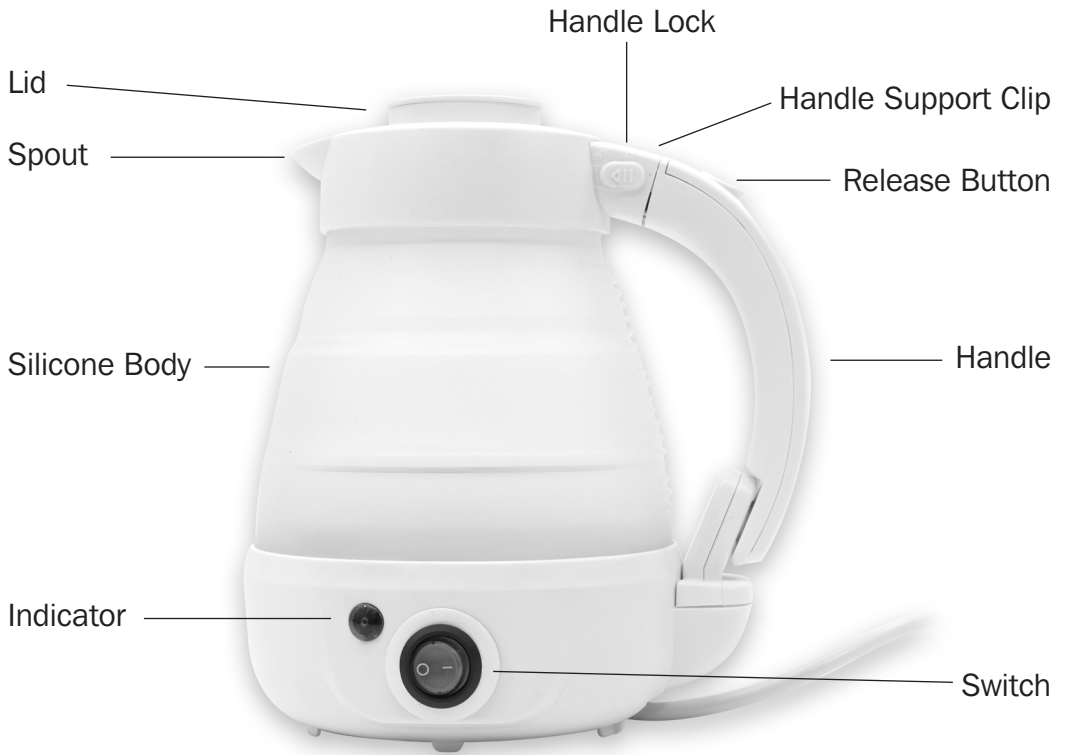



Health & Safety Guidelines

1. Do not operate the appliance without any water to avoid damaging the heat elements.
2. Please disconnect the appliance from the mains power supply when not in use.
3. Do not let the cord hang over the edge of a table counter or get in contact with a hot surface.
4. Do not place on or near a hot gas or electric burner or in a heated oven.
5. Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.
6. Ensure that the kettle is placed on a flat, even surface and is out of reach of children.
7. To protect against a fire, electric shock or personal injury, do not immerse the cord, electric plug or kettle in water or other liquids.
8. Always take care when pouring boiling water. Pour the boiling water slowly and carefully.
9. Be careful when opening the lid for refilling when the kettle is hot as steam may be expelled.
10. Close supervision is necessary when any appliance is used by or near children.
11. Always hold the kettle using the handle.
12. Extreme caution must be used when moving an appliance containing hot water.
13. This appliance is not a toy. Keep children out of reach.
14. When the water is boiling, avoid contact with the hot steam that is coming from the spout.
15. Before cleaning, disconnect the appliance from the mains supply and allow it to cool.
16. Always ensure the lid is closed when boiling. Do not lift the lid when the water is boiling. Risk of scalding.
17. If the supply cord is damaged, it must be replaced by a qualified professional to prevent harm/injury.
18. Do not use the appliance for anything other than its intended use.
19. If the kettle is overfilled, boiling water may be ejected through the spout during boil.
20. Do not use the kettle outdoors.
21. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety
22. Be careful of potential injury from misuse.
23. The heating element surface is subject to residual heat after use.



Folding/Unfolding the Kettle

This kettle features a space saving design and will be collapsed/folded when packed.

Unfolding The Kettle

1. To unfold the kettle, simply pull up the silicone body.
2. Then, unfold the kettle's handle and position it into the handle support clip, making sure that it locks into place. This will provide you with a strong and sturdy hold. (See *Figure 1*)

Please note, if the handle is NOT correctly locked into place, then the appliance will not operate.



Fig. 1

Unfolding The Kettle

1. To fold the kettle, first make sure the kettle is empty and is disconnected from the mains power supply.
2. Press the release button on the handle and release the handle lock at the same time to unclip the handle so that it can be folded downwards.
3. Then, push the silicone body until the kettle is fully folded inwards.

On First Use

Before using the foldable kettle for the first time, we recommend that you clean the kettle by boiling at full capacity 0.5L twice and ensure that the water is safely discarded.

Operating Instructions

1. Make sure the kettle is fully unfolded, and the handle is locked into place.
2. Open the lid by turning it counter-clockwise
3. Fill the kettle with the desired amount of water. Do not fill more than the maximum amount (0.5L). Too little water will result in the kettle switching off before the water has boiled.
4. Close the lid, and turn the lid clockwise to lock the lid
5. Connect the kettle to your mains power and set the switch to “-” (see *Figure 2*), which will allow the kettle to start boiling and the indicator light will switch on.

(Note: The switch will be set to “o” as default)



Fig. 2



6. The kettle will stop boiling once the water has boiled. If the switch (Figure 1) is still set to “-”, the kettle will automatically re-boil if the temperature is below a certain temperature (see Automatic Reboil Function). To stop the automatic re-boil, simply set the switch to “o”.
7. After use, please disconnect from the mains power.

IMPORTANT: Do NOT fill the kettle more than the maximum level, as water may spill out of the spout when boiling. Also, ensure the lid is locked before connecting the kettle to your mains power supply.

Automatic Reboil Function

This kettle comes with Automatic Reboil Function. This feature detects the temperature of the water inside the kettle. If the temperature of the water drops below a certain level, the kettle will automatically re-boil the water.

To switch this off, simply set the switch to “o”.

Boil-Dry Protect

In the unlikely event where the switch has been set to “-” and there is no water inside the water, the kettle’s boil-dry protection system will automatically stop the kettle from heating up.

Should this occur, and you wish to use the kettle. Allow the kettle to cool down before filling the kettle with water for boiling.

Care & Maintenance

Cleaning

Before Cleaning

Prior to cleaning this appliance, please ensure that it is fully disconnected from the mains power.

WARNING: Never immerse either the kettle or the power cord into water. And do not allow any moisture to get in contact with the power cord or plug.

Cleaning the kettle’s interior

Over time, the mineral deposits from tap water will discolour the kettle’s interior, and even lead to build up of residue. To clean this, use a suitable liquid descaler.

Cleaning the kettle’s exterior

Wipe the kettle’s exterior casing with a damp cloth.

IMPORTANT: When cleaning the kettle, do not use a chemical, steel, wooden or abrasive cleaner as this may risk damaging the kettle.



After Use & Storage

After you have finished using the kettle, disconnect the kettle from the mains power and ensure that there is no water inside the kettle and allow the kettle to fully dry.

Once fully dried, fold the kettle inwards (see Unfolding/Folding The Kettle) and wind the power cord in the cable tidy which can be found on the underside of your kettle.

Technical Support

If you require any technical support, please contact us on support@streetwizeaccessories.com and provide product name and supplier code (see Technical Specifications) along with the technical query and proof of purchase.

Technical Specification

Product	Leisurewize Foldable Travel Kettle
Supplier Code	LW671
Max Capacity	0.5L
Unfolded Dimensions	H: 18.5cm (approx) W: 15.5cm (base diameter + handle)
Folded Dimensions	H: 12cm (approx) W: 15.5cm (base diameter + handle)
Voltage	220-240V 50/60Hz
Max Power	1000W



We have over 1000 car and leisure products in our range.

Visit our website, www.streetwizeaccessories.com to:



Download Manuals



Contact Us



Browse our Range

To find out more follow us on social media.



“Streetwize” or “Leisurewize”



Leisurewize is on  YouTube

*CHECK OUT OUR EXTENSIVE RANGE WITH
OUR EASY-TO-FOLLOW PRODUCT VIDEOS*

*Subscribe to ‘Streetwize
Leisurewize Official’ today*



Streetwize: Ashburton Road West, Trafford Park, Manchester M17 1RY

www.streetwizeaccessories.com

For product support:

E: support@streetwizeaccessories.com

T: +44 (0)161 447 8597

For trade enquiries:

E: sales@streetwizeaccessories.com

T: +44 (0)161 447 8580

For spare parts:

E: spareparts@streetwizeaccessories.com

EU Registered Address: Ace Supply Co (Europe) Ltd. 25 Herbert Place, Dublin 2, D02 A098 Republic of Ireland