



**CAUTION: Please take care of your keys -
for security reasons spare keys are NOT available**

Fitting Instructions:

1. Unlock the clamp (lock barrel clicks out) and move the arms (A) together and pull the locking bar (B) in the direction of the arrow enough to fit onto the wheel.
2. Position clamp on your wheel, pull apart the arms (A) in the direction of the arrows (Fig 2) until the stand touches the ground. Push the locking bar (B) in the direction of the arrow (Fig 2) until the bar is hooked with a secure and tight fit around the wheel.
3. When the clamp is in position, push the lock barrel firmly (Fig 3) into one of the adjacent holes on the locking bar (B) and turn the key to secure.
4. To remove the clamp, unlock with key and reverse the fitting process.

Fig 1

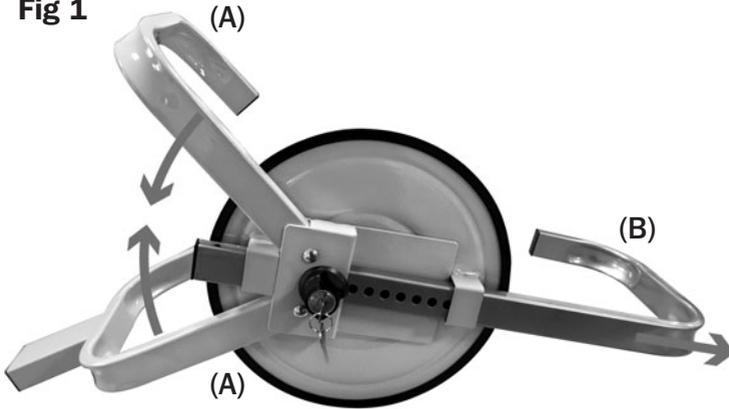


Fig 2

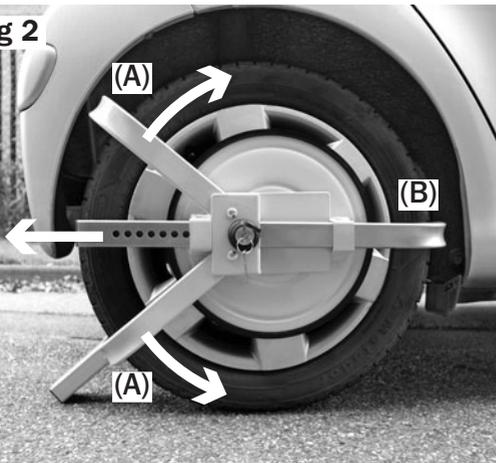


Fig 3

