



LW609

Low Wattage Electric 14L Oven/Grill

Information For Use



BEFORE USING THIS APPLIANCE, WE HIGHLY ADVISE THAT YOU READ THROUGH THE INSTRUCTIONS AND HEALTH & SAFETY GUIDANCE IN THIS MANUAL TO GET THE BEST USE OF THIS PRODUCT.





LW609

Low Wattage Electric 14L Oven/Grill



BEFORE USING THIS APPLIANCE, WE HIGHLY ADVISE THAT YOU READ THROUGH THE INSTRUCTIONS AND HEALTH & SAFETY GUIDANCE IN THIS MANUAL TO GET THE BEST USE OF THIS PRODUCT.


Information For Use

Thank you for purchasing the Leisurewize Low Watt Electric 14 Litre Oven. This oven has been specially designed for cooking quick meals when you're out caravanning or camping. It is also suitable for motorhomes and other smaller kitchens. The oven features three cooking modes, and it is great for baking, roasting and grilling and provides a maximum cooking temperature of 230°C.

This oven is mains operated and is made for indoor use only.

Product Overview

1. Temperature control knob
2. Cooking mode knob
3. Timer knob
4. Pilot lamp
5. Wire rack
6. Baking tray
7. Tray Handle

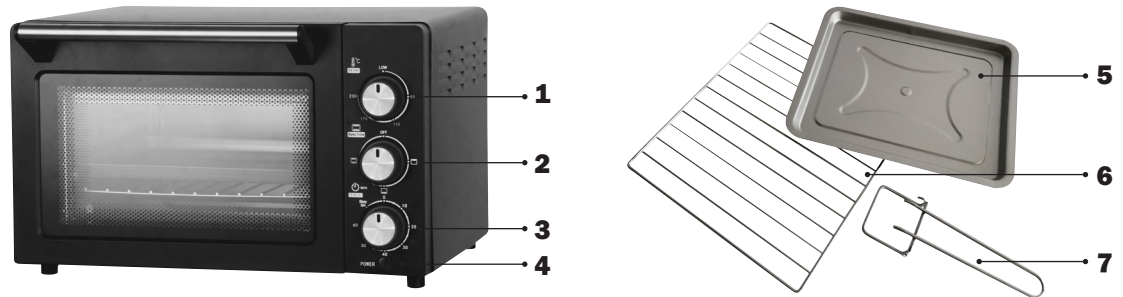

How To Use The Leisurewize Low Watt Electric 14 Litre Oven

The instructions below outline how to use the Leisurewize Low Watt Electric 14 Litre Oven

BEFORE USE:

Prior to using the oven for the very first time, we advise that you wash the oven and its accessories.

1. Before cleaning, ensure the oven is unplugged and ensure all the switches are in the "OFF" position.
2. Wash all the accessories (baking tray, wire rack & tray handle) in warm soapy water or in the dishwasher.
3. For the oven itself, use a good quality oven cleaner and cloth/sponge.
4. Allow both the oven and its accessories to thoroughly dry. Once dried, you are ready to use your oven.

OVEN COOKING SETTINGS

Your Leisurewize Low Electric 14 Litre Oven features a temperature control setting as well as well as 3 cooking modes.

Temperature control: You can set the cooking temperature from 65°C to 230°C.

COOKING MODES There are 3 cooking modes as shown on the cooking mode knob on the oven. The table below explains each of the cooking modes in more detail.

Symbol	Cooking	Suitable For
	Upper heating element ON	Grilling
	Lower heating element ON	Gentle cooking of stews & casseroles and for crisping the base of pastries or pizza
	Upper & lower heating element ON	Roasting or single shelf cooking



Using The Oven

To use the oven for cooking, please follow the instructions below:

1. Before cooking, first preheat the oven for approximately 15 minutes. To do so, select your desired temperature on the temperature control knob and choose which cooking mode you want to use.
2. Place the food item in the oven using the baking tray or wire rack, then place it inside the oven on the relevant shelf.
3. Set the timer for how long you want to cook via the timer knob.
4. When cooking is complete, position to the cooking mode knob to the 'OFF' position.

IMPORTANT INFORMATION FOR FIRST USE

When you first use the oven, do not worry if you see or smell smoke during its first use. This is normal and it will disappear after 20 minutes.

HELPFUL HINT

You will get better cooking results if you preheat the oven before cooking delicate food items like rare or medium meats and cakes.

Cleaning & Maintenance

To ensure a long life of the oven, please follow the cleaning and maintenance guidance.

1. After each use, clean the oven to prevent buildup of grease and unpleasant odours. However, we must stress that before you start to clean the oven after use, please unplug the oven from the mains supply and allow for the oven to completely cool down.
2. Do not immerse the oven in water or wash it under a tap.
3. The wire rack, baking tray and tray handle can be washed as normal kitchenware and they are also dishwasher-friendly.
4. For cleaning the oven, please use a good quality oven cleaner and cloth/sponge.
5. Do not use abrasive cleaners or sharp utensils to clean the oven.
6. Allow the oven and its accessories to thoroughly dry prior to plugging in and using the oven again.

Manufacturer's Warranty

This product comes with a 12 month manufacturer warranty which starts on the date of purchase. The warranty covers technical faults during the 12 month period. Any issues caused by accidental damage or wear and tear is not covered by this 12 month manufacturer warranty.

For any warranty queries, please contact the retailer where you purchased the product.

Technical Specifications

Product	Leisurewize Low Wattage 14L Electric Oven/Grill
Supplier Code	LW609
Rated Voltage	230V~50/60Hz
Rated Power	1200W
Mains Operated?	Yes (UK 3-Pin)
Temperature Range	65°C to 230°C
Cooking Modes	3



Health & Safety Warnings

1. Place the oven on either a heat resistant mat or surface.
2. This appliance is for indoor use only.
3. When the oven is in use, care must be taken to avoid touching the heating elements inside the appliance.
4. This oven is not suitable for children and must never be used as a toy. The accessible parts of this oven may get hot during use so young children must be kept away from the oven.
5. Never use the oven if the mains power cable has been damaged.
6. If the mains power cable has been damaged, it must be replaced by a qualified & competent person.
7. When moving the oven, please unplug the oven before doing so.
8. Always pull the plug when unplugging. Never pull the cable.
9. Do not handle the oven with wet hands.
10. To prevent the risk of fire, product damage or electric shock, avoid exposing the oven to any water or moisture. Also, no objects filled with liquids, like vases or bottled water, should be placed near the oven.
11. To prevent the risk of electric shock or fire hazard due to overheating, ensure that ventilation vents are not obstructed.
12. When positioning the oven for use, ensure there is a gap of at least 50cm above the oven and at least 20 cm at the sides. This allows for ventilation.
13. The temperature of the accessories may get very high when the oven is in use. Use handles or protective gloves when touching the accessories.
14. This appliance is not intended to be operated by means of an external timer or separate remote-control system.

Environment Friendly Disposal



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed of at the end of its life separately from your household waste. There are separate collection systems for recycling in the UK/EU. For more information, please contact the local authority or your retailer where you purchased the product.

We have over 1000 car and leisure products in our range.

Visit our website, www.streetwizeaccessories.com to:

[Download Manuals](#) [Contact Us](#) [Browse our Range](#)

To find out more follow us on social media.

["Streetwize"](#) or ["Leisurewize"](#)

Leisurewize is on YouTube

CHECK OUT OUR EXTENSIVE RANGE WITH
OUR EASY-TO-FOLLOW PRODUCT VIDEOS

Subscribe to 'Streetwize
Leisurewize Official' today



Streetwize: Ashburton Road West,
Trafford Park, Manchester M17 1RY
www.streetwizeaccessories.com

For product support:
E: support@streetwizeaccessories.com
T: +44 (0)161 447 8597

For trade enquiries:
E: sales@streetwizeaccessories.com
T: +44 (0)161 447 8580

For spare parts:
E: spareparts@streetwizeaccessories.com