



Part No. LWACC429

Mobile Mains Power Unit



This mobile mains kit is not a toy and should never be used by children. Please ensure children are supervised at all times.

Safety Instructions

- Please keep these instructions, the sales receipt and, if possible, the carton with the inner packaging.
- This mobile mains kit is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the product by a person that is responsible for their safety.
- By ignoring the safety instructions the manufacturer can not be held responsible for any damage or injury caused by the product.
- To protect children against the dangers of electrical appliances, please make sure that you never leave the product unattended with children present and always keep out of reach of children at all times
- Make sure that the product is stored in a dry environment.
- Keep away from direct heat sources or direct sunlight.
- Ensure the cable does not pose as a trip hazard.
- Check the product before each use and ensure that the housing unit or cable are not damaged, worn or anything missing. If there are then do not use the product before it has been rectified and checked by a qualified electrician.

Testing Before Use

- This product should be tested before each use. To test this product, first plug it into the mains supply. Ensure that no devices are plugged into this product. Open the cover protecting the RCD switches at the top of the product. The two flick switches should be in the on position (pushed up) and the power indicator light should be on. Now press the test button (marked with a T) and the flick switch should immediately move to the off position and the power indicator turn off.
- If this does not happen, then unplug this device from the mains and get a qualified electrician to check the product before using it again.
- If the test was successful then simply push the RCD flick switch back to the on position (up) and the power indicator should turn on. You are now ready to use your mobile mains kit.
- The product should be plugged into the site mains before plugging devices into the sockets.
- Always plug one device in at a time and check that the device is okay before plugging another in.

Maintenance

- Always ensure it is not plugged in before you clean or maintain the product.
- This product should only be maintained by a fully qualified person. Failure to do so could invalidate your warranty, or cause damage to the product or yourself.
- Never immerse the product in water. To clean the product, first ensure all the socket covers are closed and then clean with a damp cloth.
- Ensure the product has fully dried before using it next time as failure to do so could lead to electrocution.
- If this device gets damaged or hit then it must be checked by a qualified electrician before it can be used again. Even if the product looks fine it could be damaged internally.

Troubleshooting

- There is a power indicator on this mobile mains kit. If it is not lit up then the device does not have power.
- If the power indicator is lit up, but no device works when plugged into this mobile mains kit then check that the RCD has not tripped. The RCD should be in the up position. If not then unplug the device, unplug the mobile mains kit, push the RCD to the up position and try again.

Streetwize Accessories: Unit 1, Royce Trading Estate,
Ashburton Road West, Trafford Park, Manchester M17 1RY

Sales enquiries: sales@streetwizeaccessories.com

Technical enquiries: support@streetwizeaccessories.com

Telephone: 0161 447 8597

www.streetwizeaccessories.com



M17 1RY