




Heavy Duty Full Face Wheel Clamp

SWWL11

Fitting Guidelines



1. Attach the disc to the claw part of the wheel clamp using the nut provided.

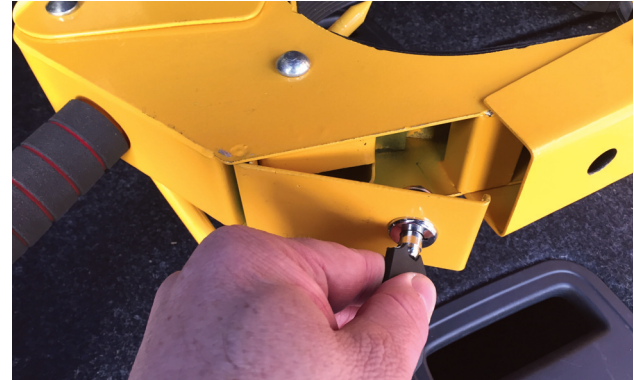

2. Open the security door using the key provided.



3. Using the crank, open the jaws of the wheel clamp enough to fit around the tyre of the vehicle (max 30cm-11.8”).



4. Place the wheel clamp on to the tyre with the disc in the centre (approx.) of the vehicle wheel (this will vary depending on tyre size).



5. Adjust the fit of the hub cover disc using the crank in the hole as indicated above as necessary to maintain a secure grip.



6. Tighten the claw around the tyre using the crank as indicated above to secure the wheel clamp on the tyre. When secure remove the crank and re-lock the security door using the keys provided.

Streetwize Accessories

Unit 1, Royce Trading Estate, Ashburton Road West,
Trafford Park, Manchester M17 1RY

Sales enquiries: sales@streetwizeaccessories.com

Technical enquiries: support@streetwizeaccessories.com
www.streetwizeaccessories.com

NOTICE: Please take care of the keys as for security reasons replacement keys are NOT available.