

streetwize



2 in 1 Digital

Tyre Pressure Gauge & Tyre Tread Measurer

INFORMATION FOR USE



Intention for Use	02
Product Elements	03
Measuring Your Tyre's Pressure	04
Measuring Your Tyre's Tread Depth	04
Battery Replacement	05
Technical Support	06
Technical Specification	06

Intention For Use

Thank you for purchasing this digital tyre gauge with tyre tread measurer from Streetwize. This product is intended to assist motorists with getting accurate tyre pressures in an instant as well as measuring the depth of tyre's tread.

It is suitable for measuring tyre pressure on cars, vans, caravans, trucks as well as motorbikes and bicycles. The tyre tread measurer is also suitable for measuring depth of the tread on various tyres.

BEFORE USING THIS PRODUCT, WE ADVISE THAT YOU READ ALL THE INFORMATION IN THIS DOCUMENT.

Product Elements

FRONT

BACK



A. Tyre Pressure Valve Inlet

B. Red LED light

C. On/Off Button

D. LCD Display

Tyre Tread Gauge Adjuster



Measuring Your Tyre's Pressure

Unscrew the caps from your tyre's valves.

Turn on the digital tyre pressure gauge by pressing the on/off button.

Select your desired measuring unit that you want to measure your tyre pressure. You can choose from PSI, Bar, Kpa and KG/CM2. You can select your desired measuring unit by pressing the on/off button.

Insert the tyre pressure gauge's inlet into the valve to get a reading. Please note, you will need to firmly press the gauge into the valve to get a reading.

Once you get your readings, replace the valves' caps.

Measuring Your Tyre's Tread Depth

On the reverse side of the product, push out the tyre tread depth measuring probe.

Then, place the measuring probe into one of central circumferential tyre grooves and then push the gauge down until the probe can't be pushed back in. Remove the gauge and take the reading .

Please note: Never place the probe on either molded tread wear indicators or on any of the raised surfaces of the tread design. Will lead to inaccurate reading.



Battery Replacement

This product requires 2 x CR2032 batteries. If the battery requires replacing due to low battery, please follow the instructions below:

1. With a screwdriver (not included), unscrew all 5 screws on the reverse panel.
2. Remove the side rubber panel and unscrew the cover where the tyre pressure gauge inlet is situated.
3. Then, carefully remove the back panel to reveal the unit's circuit board.
4. Locate the old batteries, and carefully remove them.
5. Insert the new batteries.
6. Replace the back panel, rubber side panel and the cover of the tyre pressure gauge inlet.
7. Then, replace the screws.
8. Turn on the unit.



Technical Support



If you require any technical support for your product within the warranty period, please contact us on:

support@streetwizeaccessories.com

and provide the product name and supplier code (see Technical Specifications) along with the technical query and proof of purchase.

Technical Specification

Product Name	Streetwize 2-in-1 Digital Tyre Pressure Gauge & Tyre Tread Measurer
Product Code	SWDTG4
Battery requirements	CR2032 x 2
Pressure reading units	PSI, Bar, Kpa and KG/CM2
Tyre tread reading units	Millimetre (mm)

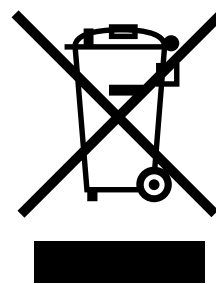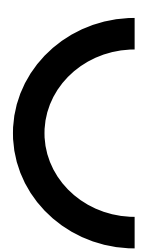

Streetwize: Ashburton Road West,
Trafford Park, Manchester, M17 1RY

For Product Support:

E: support@streetwizeaccessories.com

T: +44 (0)161 447 8597

For Trade Enquiries:

E: sales@streetwizeaccessories.com

T: +44 (0)161 447 8580

EU Regd. Address: Ace Supply Co (Europe) Ltd, D02 A098, ROI