



SWINV500

500W

1000W PEAK

Modified Sine Wave

Inverter

Information for use

Recommended battery	Running time at rated continuous rated power
12V/60Ah	1 hour 20 minutes

Health & Safety Guidelines

Warning! Electric Hazard. Keep away from children

1. This inverter is not a toy, and it should never be used by children.
2. This inverter generates the same voltage as a UK 3-pin plug socket. Please operate it as if you are using any other AC mains socket.
3. Never insert any kind of foreign object into the inverter's plug sockets, fan or vent openings.
4. Do not operate or expose the inverter to water, rain, snow or spray
5. Never connect the inverter to an AC power source. This inverter is only designed to accept a DC power supply.

Warning! Heated Surface

6. The inverter's outer casing may become hot after prolonged use or overloading. During operation, ensure there is at least a 5cm (2 inches) gap between the inverter and any other walls.
7. Please keep any flammable materials away from the inverter during operation.

Warning! Explosion Hazard

8. Never use the inverter in the presence of flammable substances

Caution!

9. Do not connect a live AC power source to the inverter's AC output sockets. This will damage the inverter, even if the inverter is switched off.
10. Do not expose the inverter to temperatures over 40°C.

Caution! Do not use the inverter with the following equipment:

11. Appliances that have a AC motor. This includes refrigerators, heavy duty power tools, washing machines, dishwashers and medical equipment.
12. Devices that have a thyristors. This includes laser printers and photocopiers.
13. Large electrical appliances such as newer electrical TVs with LED display.
14. Fluorescent lights.

Intention For Use

Thank you for purchasing this 500W modified sine wave inverter from Streetwize. This inverter safely converts your vehicle's 12V DC battery into a 240V AC power supply for using standard UK electrical appliances that require up to 500W.

It is intended for people who require access to an AC power supply in areas where there is restricted access to power. They're suitable for caravan/campervan users as well as tradespeople.

This modified sine wave inverter is not suitable for use with appliances with AC motors (i.e. microwaves, refrigerator), medical equipment, laser printers and fluorescent lights.


IMPORTANT: This inverter is primarily designed for powering appliances up to its stated continuous output. The stated peak output is only available for a limited time.

Product Elements

1. Modified sine wave inverter
 2. Battery clamp connection cables
-

Measuring The AC Voltage

The output waveform of the AC output is a MODIFIED SINE WAVE. To measure the AC output voltage, you must have a TRUE RMS VOLTMETER.

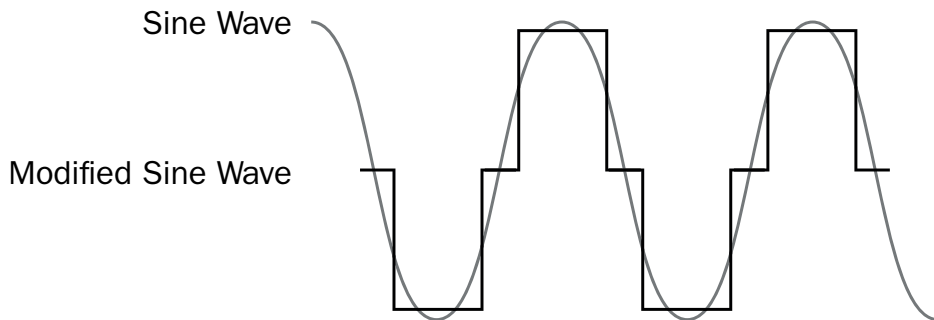

Operating Instructions

Optimum Working Conditions

For safe & optimum performance, please install the inverter in a location that is:

- Dry - The inverter should not be near any liquid or moisture.
- Cool - Keep it away from any high heat source.
- Well-ventilated - Allow for atleast 5cm of space on all sides.
- Clean - To prevent any dust or unwanted elements from getting inside the inverter.
- Away from flammable substances - To prevent fire or explosion.

12V Socket

To use the inverter via your vehicle's 12V socket, simply connect the O-rings of the 12V connection cable to the inverter's terminals, with the black cable going to the negative terminal and the red cable going to the positive terminal. Plug the 12V plug into the 12V socket, then switch on your vehicle.

WARNING: Only use the 12V plug for powering appliances that require less than 150W. Do NOT power an appliance that requires more than 150W as this will risk damaging your vehicle's fuse.

Direct Battery Connection

Before connecting this inverter, please ensure your vehicle is fully switched off.

Then, connect the black (negative) battery clamp connection cable to the negative terminal of the inverter via the O-ring first, and then connect the clamp to the negative battery terminal of your 12V battery. Then, connect the red (positive) battery clamp connection cable to the positive terminal of the inverter via the O-ring and then connect the clamp to the positive battery terminal of your 12V battery.

IMPORTANT: When starting your vehicle's engine, please disconnect the inverter first before starting the engine.

Operating Appliances

Operating an Appliance Through The 3-Pin Plug

Once the inverter is connected to your battery, just plug in your appliance via the 3 pin socket, and then turn ON the power switch.

Operating an Appliance Via The USB

Once the inverter is connected to your battery, just plug in the device via the USB socket, and then turn ON the power switch.

Peak Output


This inverter provides a continuous output of 500W as well as a peak output of 1000W. Meaning, when you try to power appliances that total more than 500W, the inverter has the capability to automatically adjust the wattage up to 1000W.

IMPORTANT: When operating appliances that require more than the specified continuous power wattage, the inverter will operate for a very limited amount of time and it will automatically shut-down.

For long lasting performance, we recommend that you use this inverter for appliances requiring less than specified continuous power wattage.

How to Replace the Fuse

The inverter's fuse is located at the back of the unit. See Figure 1.

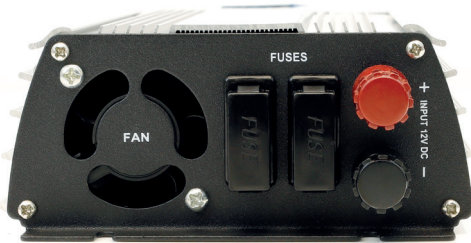

If in case the fuse does need to be replaced (see Troubleshooting), you will need a 30A fuse.

Fig. 1

Troubleshooting

Table 3 outlines possible troubleshoots along with its suggested solutions.

Troubleshoot/Problem	Possible Cause	Suggested Solution
Inverter is not working	Poor battery connection	Turn off the inverter and disconnect it from the battery. Then reconnect the inverter to the battery and check to see if the connection is correct.
	Short circuit	Turn off the inverter and disconnect it from your 12V battery. Reconnect the inverter to the battery's terminals and check to see if terminal connections are correct.
	DC input is below 10V	Turn off the inverter and disconnect it from your 12V battery. Please check the Voltage of your battery. This inverter is only suitable for 12V batteries only.
	DC input is above 15V	Turn off the inverter and disconnect it from your 12V battery. Please check the Voltage of your battery. This inverter is only suitable for 12V batteries only.
	Blown Fuse	Check and replace the fuse. See How to Replace The Fuses
Inverter gets really hot	Overheat	Turn off the inverter and disconnect it from your 12V battery and allow the inverter to fully cool down. Ensure your inverter is operating in a cool area.
Inverter shuts down after operating for a short time	Overload	The total Wattage is exceeding the inverter's specified continuous power output. Turn off the inverter and disconnect it from your 12V battery. Then disconnect any appliances that are not required to reduce the Wattage load.

After Use

After you have finished using the inverter (or when the inverter is not in use), turn off the unit and make sure your vehicle's fully switched off.


Then, turn the unit off and then disconnect the inverter from the 12V power supply. When disconnecting from the battery, disconnect the negative cable first, followed by the positive cable.

Best Practices for Protecting Your 12V Battery

- To prevent your vehicle's 12V battery from being depleted. We recommend running the engine for 10 to 20 minute to recharge the battery after using the inverter for 2 to 3 hours. Important: Before starting your vehicle's engine, please disconnect the inverter from your battery/power supply.
- When connecting the inverter to your battery's terminals, it is important that you connect it via the correct polarity (i.e. Connect + from inverter to + of battery terminal and connect – from inverter to – of battery terminal) to prevent reverse polarity.
- When you are using the inverter and you hear a beeping sound coming from the inverter, this means your 12V battery is low. To recharge, disconnect the inverter from your battery and turn on the engine for 2 to 3 hours.
- When charging your 12V battery using a battery charger, please disconnect the inverter.

WEEE



The WEEE symbol  on this product means that the Power Inverter should be ethically dismantled or recycled to minimise environmental impact. Please check with your local authority for more information.

Technical Support

If you require any technical support for your product within the warranty period, please contact us on support@streetwizeaccessories.com and provide the product name and supplier code (see Technical Specifications) along with the technical query and proof of purchase.

Technical Specifications

Product Name/Code	Streetwize 500W Power Inverter/SWINV500
Max Continuous Power	500W
Peak Power	1000W
Input Voltage	12V (10 to 15V) DC
Output Voltage	230V AC
Output Waveform	Modified Sine Wave
USB output	5V DC 1000mA
No load current	<0.3A
Battery low shutdown	10+/-0.5V DC
Battery low alarm	11+/-0.5V DC
Thermal shutdown	60+/-5°C
Fuse	30A (x2)
Product dimensions	23.2 x 12.6 x 5.5CM



Streetwize, Ashburton Road West,
Trafford Park, Manchester, M17 1RY

For Product Support:

E: support@streetwizeaccessories.com

T: +44 (0)161 447 8597

For Trade Enquiries:

E: sales@streetwizeaccessories.com

T: +44 (0)161 447 8580

EU Regd. Address: Ace Supply Co (Europe) Ltd. D02 A098, ROI

www.streetwizeaccessories.com