



LWACC495

# Door Fly Screen

## with Magnetic Fasteners

### Fitting Instructions:

Ensure the area the Door Fly Screen will be attached is free from dirt, dust and grease.

Establish the direction the Door Fly Screen will open - If the door opens IN, install the screen on the OUTSIDE of the door. If the door opens OUT, install the screen on the INSIDE of the door.

The Door Fly Screen can also be installed on on sliding doors, attach to the OUTSIDE of the door frame and the stationery door.

### Installation Instructions:

1. Locate the centre of the door frame and mark it at the top.
2. Lay the Door Fly Screen flat on the floor with the magnets correctly aligned, the top of the screen should have a larger gap at the top than the bottom.
3. Double check each magnet attracts and aligns correctly to the opposite magnet.
4. If the door frame is a different size than the Door Fly Screen. Either trim to the correct size or fold the hem over to the desired width and secure with tape (not supplied) or stitch.
5. Attach the hook side of the pads supplied to the mesh fabric in the positions on the diagram opposite.
6. Peel off the backing from pad 1 and apply to the centre of the door frame, ensuring the screen hangs but does not drag on the floor, followed by pad 2 & 3. Peel of the backing from pad 7 and apply next to pad 1 again ensuring the screen hangs but does not drag on the floor, repeat for pads 8 & 9.
7. Ensure the magnets are correctly aligned and attach the pads 4-6 & 10-12.



### Tips, Cleaning & Storage:

Plastic frames require only the adhesive pads, but you can also use the tacks provided for wooden frames, please note these will leave puncture holes in the frame.

Do not use any abrasive or harsh cleaners on the Door Fly Screen, simply wipe/dust clean. If necessary use a damp cloth and a little soap to spot clean, allowing the mesh to air dry. Do not put in a tumble drier and do not dry clean.

### Safety Information:

Keep children away from the packaging material and the storage bag. Always maintain a safe distance from any heat sources such as cooker hobs or ovens. Because of possible magnetic interference for people with implanted medical devices (i.e. pacemakers) it is recommended to consult a Doctor before using this product.

Door Fly Screen is not a barrier for children or pets and should not be used as such.

#### Streetwize Accessories:

Unit 1, Royce Trading Estate, Ashburton Road West,  
Trafford Park, Manchester M17 1RY

**Sales enquiries:** [sales@streetwizeaccessories.com](mailto:sales@streetwizeaccessories.com)

**Technical enquiries:** [support@streetwizeaccessories.com](mailto:support@streetwizeaccessories.com)  
[www.streetwizeaccessories.com](http://www.streetwizeaccessories.com)