



1. Please wash the light colour clothes and dark colour clothes separately.



3. Please remove coins and sharp objects from clothes before washing.



5. Do not wash or dry any clothes containing petrol or alcohol.



2. Please wash dirty clothes alone.



4. Please turn socks inside-out when washing.



6. Please place small items and knitted items in a washing net before washing.

 
CAUTION

1. The machine should only connect to a single earthed plug socket.
2. Please use a plug socket where the electric current is higher than 5 Amp.
3. Please do not cut, twist, or otherwise damage the power cord or hang any items on it.
4. Please do not unplug from the power supply socket with wet hands.
5. This appliance not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with or near the appliance.
6. If the power cord is damaged, it must be replaced by qualified person.

Streetwize Accessories:

Unit 1, Royce Trading Estate, Ashburton Road West,
Trafford Park, Manchester M17 1RY

Sales enquiries: sales@streetwizeaccessories.com
Technical enquiries: support@streetwizeaccessories.com
www.streetwizeaccessories.com



Portawash

Portable Twin Tub Washing Machine



Feature	Double layer, easy to take, aluminium motor
Washing Capacity	2.5KG
Spinning Capacity	1.5KG
Washing Power	230W
Spinning Power	116W
Product Size	570×355×565mm
Packing Size	595×375×590mm
N.W./ G.W.	9.5 / 10.5KG

Portawash Parts Identification



- 1** Water inlet
- 2** Washer cover
- 3** Washer tub
- 4** Drain selector
- 5** Wash timer
- 6** Spin timer
- 7** Spin cover
- 8** Spin tub
- 9** Carrying handle

INFORMATION

Preparation and usage of washing machine:

1. Remove all packaging and ensure air ventilation point is not blocked.
2. Make sure the water inlet tube is securely fastened to the washing machine and tap before use.
3. Place clothes in washer tub (3), taking care not to overload, maximum load 2.5kg, including water required.

Ensure the drainage tube is in a suitable place to drain when the wash cycle has finished.

1. Wash timer
 - > Select wash time between 3 to 15 minutes before washing clothes.
2. Spin timer
 - > Select Spin time between 1-5 minutes depending on the laundry materials and load.
3. Drain selector


- A] Gentle Wash: For light laundry and soft material.
- B] Normal Wash: For all type of materials and laundries.
- C] Drain: To release water from the tub.

Safety Guidelines



1. Do not use the washer in a bathroom or other humid place.

2. Do not use the washer on an inclined or bumpy surface and keep away from wall at least 2cm.

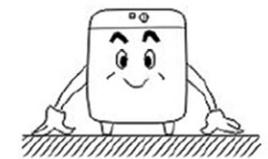

3. Never place your hands into the wash/spin tub while the washer is in operation.

4. Do not use the washer away from direct sunlight.



5. Try to avoid splashing water on to the control panel where the timer and switches are located.

6. Not for use by children, never leave the Portawash unattended when children are nearby.



7. Do not use water hotter than 50°C. This may cause damage to the Portawash casing.

8. Always use the Portawash on a hard surface to avoid blocking the air ventilation



9. Never place naked flames near the Portawash, do not place any items on top of the Portawash when in use.