12V Air Compressor



Important Safety Information

streetwize

- Compressor: Use 12Volt DC only. Make sure that your vehicle 12V power socket is free of any ash, residue or debris. A dirty power socket can cause the compressor and power cord to overheat. Overheating can cause damage to your compressor/vehicle and could cause personal injury (disconnect power when not in use).
- Designed to inflate car tyres at an air flow rate of 17L/min will inflate a standard 195/60 R14 Tyre in approx.
 8 mins, also suitable for bicycle tyres, ATV tyres, sports equipment, air mattresses, beach toys & other inflatables. Do not use for any purpose other than inflating otherwise personal injury can occur.
- 3. When operating your compressor do not run for more than 10 minutes of continuous use. Allow compressor to cool down for 10 minutes before re-using.
- 4. After using, turn off power switch (3).
- 5. The compressor is not a toy. Keep away from children at all times.
- 6. Do not carry compressor by the air hose or power cord, damage may occur.
- 7. Do not leave the compressor unattended while in operation.
- 8. Do not over inflate. Be sure to follow the manufactures instructions for the item you are inflating.
- 9. Keep the compressor away from flammable areas/liquids at all times.
- 10. Do not operate the compressor in wet or damp areas.
- 11. Operate the compressor only with the accessories that are included.

NOTE: THIS COMPRESSOR OPERATES ONLY ON 12 VOLT DC. DO NOT ATTEMPT TO OPERATE THIS COMPRESSOR WITH ANY OTHER SOURCE OR VOLTAGE. DO NOT REWIRE OR RECONFIGURE COMPRESSOR FROM ITS ORIGINAL DESIGN OR PERSONAL INJURY OR BODILY HARM MAY OCCUR.



To inflate tyres

- 1. Move vehicle so that the tyre valve is on the bottom closest to the ground. Place the air compressor next to the tyre.
- Plug the power cord into the 12V power socket receptacle. 2
- 3. Place connector on type value stem and push down as far as possible. Close the thumb lock.
- 4 When the correct pressure is reached on the analogue pressure gauge, unplug the power cord.
- Remove adaptor from tyre valve, remove the power cord from the cigarette-lighter. 5.

For other inflatables

- Select the suitable adaptor (A & B for Inflatables & C for sports balls) 1 and insert it into the connector. Close thumb lock.
- 2. Check the owners manual for exact inflation pressures. Others are:
- 3. Insert adaptor into article to be inflated.
- 4. Plug power cord into 12V power socket receptacle.
- 5. When correct pressure is reached unplug power cord.
- 6 Remove adaptor from inflated article. Remove adaptor from connector.
- 7. Always check item being inflated with Streetwize pressure gauge. Avoid excessive pressure in low pressure objects.

Warning Avoid over-inflating. Never exceed the recommended pressure. Items that are over inflated may burst and cause serious injury.

TROUBLE SHOOTING

Compressor does not start/blows fuses

- Push the power plug firmly into the 12V power socket and twist it back and forth. 1.
- Check receptacle and plug terminals for dirt, particularly tobacco. Use a non-conductive probe, 2. not fingers or metal.
- 3. Check 12V power socket fuse. This should be 15 Amps minimum.
- 4. Power cord unplugged.

Compressor runs but does not inflate

- 1. Be sure the connector is on the valve stem as far as possible before closing the thumb lock.
- 2. Check article for leaks.
- Check hose for breaks and leaks at fittings. 3.

Compressor runs slowly

- 1. Overheated from excessive use. Unplug power cord and leave it to cool for 30 minutes.
- 2. Voltage too low. Check condition of battery providing the power.





►

EU Registered address: The Ace Supply Co (Europe) Ltd, 25 Herbert Place, Dublin 2, D02 A098 Republic of Ireland.

