



SWPB1

Emergency Jumpstarter & Portable Power Bank

**12V -
400Amp**

A **POWERFUL** but compact **400Amp-(peak)** Emergency Jumpstarter for most 12V vehicles. **PLUS** a Power Bank that also provides **HOURS OF PORTABLE POWER** for smart phones or tablets and much more when out and about!

Please **READ & UNDERSTAND** the instructions carefully before operating this device, and retain for future reference.

IT IS RECOMMENDED TO CHARGE THE UNIT FOR AT LEAST 3 HOURS BEFORE ANY USE AND TO KEEP IT FULLY CHARGED WHEREVER POSSIBLE.

PLEASE NOTE: The Emergency jumpstart will **NOT** jumpstart a vehicle if it has a Voltage rate is above 12.3V (a good level of charge). If the vehicle does not start this may indicate another problem. Please have the vehicle checked by a qualified mechanic.

Emergency Jumpstart & Power Bank contents:

- Emergency Jumpstarter & Power Bank
- 12V Smart Jumpstart Cables (protects jumpstarter & vehicle battery).
- 240V mains plug.
- 12V in-car charging plug.
- USB charge cable with 3 built-in assorted adaptors.
- Laptop charging lead with 8 adaptors



Emergency Jumpstart Operating Instructions:

The unit can jump start vehicles with a minimum of 3 LED's lit. However for optimum performance fully charge the unit (5 LED's lit). NEVER USE THIS PRODUCT TO JUMPSTART WITH LESS THAN 3 LED's LIT AS THIS CAN CAUSE PROBLEMS AND DAMAGE THE PRODUCT.

1. Connect the crocodile clips in the following order. Positive (+ Red) charging lead to the positive (+ Red) terminal. Connect the negative (- Black) charging lead to the negative (- Black) terminal. It is important that the crocodile clips are making good contact with the battery terminals.
2. Connect the crocodile clips into the Jumpstarter power outlet.
3. Turn the key to start the vehicle engine in no longer than 4 second bursts. If the engine does not start immediately turn off the engine, wait at least 15 seconds.
4. When the vehicle starts, **IMMEDIATELY** unplug the power supply plug from the unit and remove the crocodile clips from the battery.



Caution: Never connect the red & black crocodile clips together at the same time.

Always use the charger at normal room temperature, never use near a naked flame. Store in a cool dry place.





DO NOT use or store at temperatures above 50°C or below -10°C.

Function on Smart Battery Cable




- 1) Reverse polarity connection: Solid Red LED with fast 2 short beep.
- 2) Short-circuit protection: Solid Red LED with long beep (Beeping as 3.3Hz Frequency).
- 3) Over-heat protection: Solid Red LED with long beep (Beeping as 2Hz Frequency).
- 4) Over-discharging protection: Solid Red LED with 2 short beep.
- 5) Green/Red LED flashing: Searching for status connection.
- 6) Green LED: Correct connection after one beep.

Do not use any charger cable other than those specifically provided with the Jumpstarter/Powerbank for jumpstarting or charging.

To connect to battery. Connect Red (+) Croc Clips to Positive (+) battery terminal, followed by Black (-) Croc Clips to (-) terminal. To remove the Croc Clips, remove Black (-) Croc Clips followed by Red (+) Croc Clips.

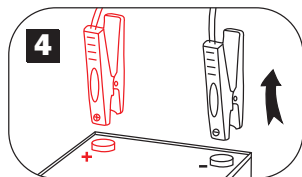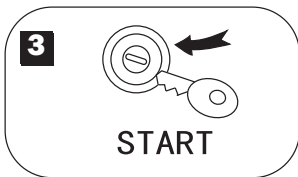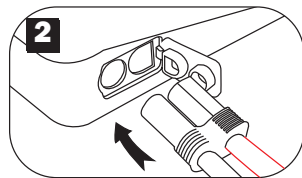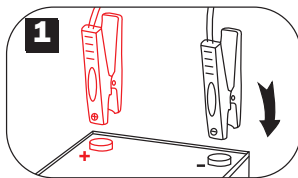

Charging Instructions: The Power Bank has multiple voltage charging outputs 19V & 12V (1 & 2) or charging input 15V/1A (3). Insert the power cable into the appropriate power point 19V/3.5A (1) or 12V/2A (2) on the unit.

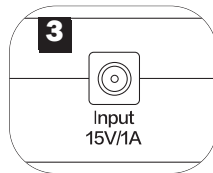
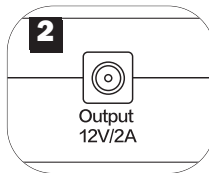
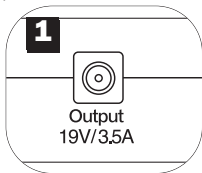


PLEASE NOTE: Laptops & larger gadgets generally require a 19V power supply.






Charging laptops etc:

1. Plug in the power connector into the required 19V or 12V output power point.
2. Choose the correct adaptor to connect the laptop or other device to the Power Bank.
3. Insert the correct connector onto the power connector lead and connect the device to the Power Bank unit. Press the "On" button.

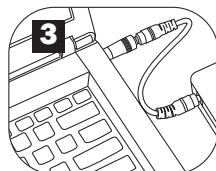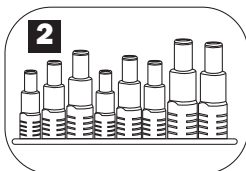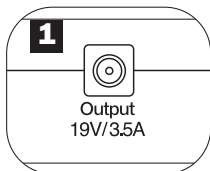


Charging smart phones etc:

1. Insert the USB charging plug into the 5V 2.1A USB output port.
2. Insert the correct adaptor for the device to be charged.
3. When the cable is connected Press the "On" button to charge the device.

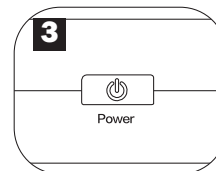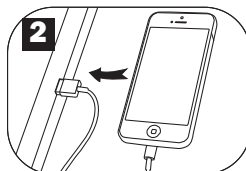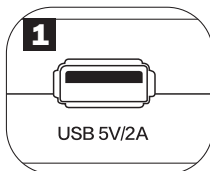

Charging the Emergency Jumpstart & Powerbank:

1. Insert either the 12V In-car charger or 240V mains power cable into the 15V/1A input port on the unit.
2. Insert the plug end into the required power socket. The LED's (blue) will flicker to indicate charging, 5 lit LED's will indicate a FULL charge.

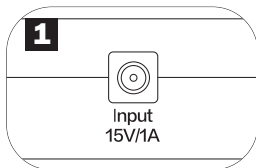




LED Torch

Press and hold the power button (1) to turn on the LED torch, then press again to select.

SOS FLASHING or STROBE (fast)

Press again to turn off.

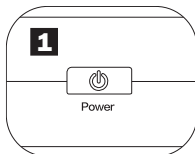


Warnings: The power bank will generate heat when charging. Use it in a well ventilated area when charging. Keep the power bank away from heat sources, direct sunlight, humidity, water or other liquids.

Do not operate the power bank if it is wet or damaged to prevent electrical shock, explosion and/or injury. Improper repairs of this device may place the user at risk. Do not use the power bank with wet hands. Keep the input ports free from dust, lint, etc. which prevents good connections. Do not use this unit for anything other than its intended use. The power bank is not a toy. Keep out of reach of children.

Do not charge under pillows, blankets. Do not store in a car during hot weather. Short-circuiting a Li-ion battery can cause it to ignite or explode. Never open a Li-ion battery's casing. Li ion batteries contain safety devices that protect the cells inside from abuse, if damaged these can cause the battery to ignite or explode.

Do not charge the power bank and charge an electronic device at the same time. This will shorten the power bank's battery life.

THE MANUFACTURER AND SUPPLIER HOLDS NO RESPONSIBILITY FOR DAMAGE CAUSED BY INCORRECT OR IMPROPER USE OF THE PRODUCT. PLEASE READ AND RETAIN THE INSTRUCTIONS FOR FUTURE REFERENCE.

The WEEE symbol  on this product means that this product should be ethically dismantled or recycled to minimise environmental impact. Please check with your local authority for more information.

IMPORTANT: ADDITIONAL SAFETY INFORMATION: This Jumpstarter & Power Bank is **NOT** intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been given instruction concerning use of the Jumpstart & Power Bank by a person responsible for their safety.

WARRANTY: The 12 month warranty on this product will need to be activated within 30 days of purchase, please go to our web site and click on the "Warranty" link and enter your details on the warranty screen. www.streetwizeaccessories.com.

Streetwize Accessories:

Unit 1, Royce Trading Estate, Ashburton Road West,
Trafford Park, Manchester M17 1RY

Sales enquiries: sales@streetwizeaccessories.com

Technical enquiries: support@streetwizeaccessories.com

Telephone: 0161 447 8597

www.streetwizeaccessories.com



M17 1RY