



# Twin Cooking Hob



LW540

**For indoor use only.**

Please read these instructions carefully before operating this single cooking hob and retain for future reference.



### **Before first Use.**

Read and follow ALL the instructions, even if you feel you are familiar with the product, then retain the instructions for future reference.

Your attention is drawn particularly to the sections containing IMPORTANT SAFEGUARDS", "FOR YOUR SAFETY" and "SERVICE" statements.

Please see "Warranty" panel on the back of this manual.

### **Important Safeguards.**

When using an electrically powered product, basic safety precautions should always be followed:

WARNING: To reduce the risk of fire, electric shock or injury to persons or property:

- Always operate the product from a power source of the same voltage, frequency and rating indicated on the product "rating label".
- Close supervision is necessary when the product is used by or near children. Keep out of reach of children when not in use.
- Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- To reduce the risk of electric shock, do not immerse or expose the product or flexible cord to rain moisture or any liquid other than those necessary for the correct operation of the product.
- This product should not be used in the immediate vicinity of water, such as a bathtub, washbowl, swimming pool etc. Where the likelihood of immersion or splashing could occur.
- Do not operate or place any part of this product on or near any hot surfaces (such as a gas or electric burner or hot-plate or in a heated oven).
- Switch off and unplug from outlet when not in use, before assembling or disassembling parts and before cleaning. Remove by grasping the plug-do not pull on the cord.
- Avoid contacting hot surfaces,
- Do not leave the appliance for other than its intended use. Do not leave the appliance unattended when switched on.
- The use of attachment or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
- **This product is intended for normal domestic/household use only.**



### How to use your hot plate

Before using your Hot Plate for the first time, turn the Hot Plate on the highest setting for 3 to 5 minutes to condition the protective coating. This may initially result in some excess smoke, but this is normal. This should be the only time the Hot Plate is turned on without a cooking utensil on it.

For the most efficient operation of your Hot Plate the cooking utensils used should have a solid base and be as even as possible, and a diameter of approx. 16 to 18cm and a maximum capacity of 1ltr (1000W hot plate).

The base diameter of cooking utensils smaller than the diameter of the Hot Plate should not be used.


Extra care should be taken using cooking utensils that project beyond the Hot Plate and should NOT intrude into the area of close proximity of the controls.

Utensils with convex, concave or uneven bottoms should not be used. NO items other than the cooking utensils should come into contact of the Hot Plate for long periods.

### Operation of control dial

Turn the controls to the recommended position marked to achieve the desired temperature. Use this guide as a reference.

**IMPORTANT:** When not in use always turn controls to the "OFF" position and disconnect from the power outlet.

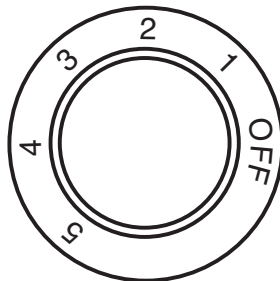

1. For simmering of delicate foods, and thickening sauces, etc.
2. Slow cooking.
3. For simmering large quantities.
4. Shallow frying of meat and pan dishes,
5. To bring all dishes to a boil.

**Please Note: the lamp will go off when the Hot Plate reaches temperature, and will cycle on and off to maintain the temperature.**



### For your safety

- Never immerse the Hot Plate in water or any other liquid. by streetwize
- Oil and fat being heated are not to be left unattended without adult supervision.
- Do not touch the surfaces or the Hot Plate when in operation, as they get hot.
- The Hot Plate is designed only for the heating and cooking of food, and must only be used with cooking utensils placed on it.
- The Hot Plate must be turned to "OFF" setting and disconnected from the power outlet when not in use.
- Cooking utensils, regardless of their size should not project beyond the Hot Plate or intrude into the area of close proximity of the controls.
- It is dangerous to operate any electrical product with a damaged cord or plug, or after the product malfunctions or is dropped or damaged in any manner. Return the complete product to the place of purchase for inspection and repair.

### How to care for your hot plate

- Disconnect the Hot Plate from the power outlet.
- Do not immerse the Hot Plate in any liquid.
- Do not allow the cord to touch any hot surfaces of the Hot Plate.
- Clean the painted surface with a damp soft cloth and mild household cleaning power.
- Baked on marks on the circular Hot Plate can be removed with a household cleaning power. Turn the unit on for a moment to dry after cleaning.
- Commercially available Hot Plate cleaners are recommended to preserve natural finish of the hot Plate.

### For indoor use only.

**WARRANTY:** The 12 month warranty on this product will need to be activated within 30 days of purchase, please go to our web site and click on the "Warranty" link and enter your details on the warranty screen. [www.streetwizeaccessories.com](http://www.streetwizeaccessories.com).

#### Streetwize Accessories:

Unit 1, Royce Trading Estate, Ashburton Road West,  
Trafford Park, Manchester M17 1RY

**Sales enquiries:** [sales@streetwizeaccessories.com](mailto:sales@streetwizeaccessories.com)

**Technical enquiries:** [support@streetwizeaccessories.com](mailto:support@streetwizeaccessories.com)

**Telephone:** 0161 447 8597

[www.streetwizeaccessories.com](http://www.streetwizeaccessories.com)



**M17 1RY**