



Induction Hob

with Adjustable Power Watt Settings

Thank you for purchasing this Induction Hob from Leisurewize. This induction hob is ideal for caravan holiday makers, campervan owners & motorhome users. It is also suitable for use at home and in small kitchenettes.

This product is intended for domestic use. This product is NOT intended for commercial use.

IMPORTANT: Before using this product, we highly advise that you read all the information in this document. And please keep this document in a safe place for future reference.



LW613

Table of Contents

Intention For Use	1
Product Elements	3
Health & Safety Guidelines	3
How Does The Induction Hob Work?	3
Operating Instructions	4
Temperature Range (oC)	5
Selecting Your Power Input	5
Power input settings (W)	5
Recommended Pans/Pots	5
Troubleshoot/Error Messages	5
Technical Support	6
Technical Specification	7



Health & Safety Guidelines

Please read and familiarise with the following health & safety guidelines below before using the appliance.

1. When connecting this appliance to your mains power supply, please make sure that the correct input voltage and wattage is supplied to the product.
2. When the product is not in use, please ensure that the product is switched off and is fully disconnected from the mains power supply.
3. DO NOT leave this appliance unattended when in use.
4. If the appliance has accidentally been submerged in water, please immediately disconnect the appliance from the mains power supply and then remove the product from the water. Never remove the product from the water when it is connected to the mains power supply. Risk of electric shock.
5. Never attempt to reconnect the appliance after it has been submerged in water. Allow the product to be fully dried and be tested by a qualified professional before you use the appliance again.
6. This product is not a toy, and it is not designed to be used by children. Always keep the power cable away from the induction hob's heat source, water or any other liquid.
7. Ensure sharp objects such as knives are never near the mains power cable, especially when the product is in use.
8. Never allow the power cable of the unit to hang off the edge of a work surface where it could be pulled by a small child. Always check the position of the mains power cable when the product is in use.
9. Never carry the appliance by the mains power cable.
10. If the appliance's power cable or plug becomes faulty or damaged, do not use the product. Please check the cable prior to use.
11. If the appliance does become damaged (which also includes appliance's plug/power cord), NEVER attempt to repair the damage yourself. We highly advise that you seek assistance from a competent professional to carry out the repair.
12. When this appliance is in use, this product will get very hot. NEVER touch the surface when in use. Risk of burn/injury/scalding.
13. Never use this product outdoors. This appliance is designed for indoor use only.

14. When using this product, ensure you use it in a well ventilated area.
15. Please ensure the appliance's air vents are not obstructed. When positioning the unit, ensure that the unit is 10cm sides and the rear of the unit.
16. DO NOT use this appliance with wet hands. Always ensure your hands, the appliance and the work area are dry before using the product.
17. If this appliance stops working unexpectedly, switch off and unplug the appliance immediately. Get the product assessed by a qualified & competent professional.
18. Place the appliance on a heat resistant surface. Never use the appliance on a low-heat resistant surface such as vinyl.
19. Never place the appliance on a metallic surface.
20. After use, the induction hob will remain hot for a period of time. Allow time for the appliance to fully cool down after use.
21. The appliance may have an affect on items that have or attract magnetic fields. These include radios, televisions and bank cards.
22. During use, never place paper between the pot/pan and appliance. Risk of fire.
23. Never disconnect the power cord immediately after cooking. Allow at least 15 minutes for the unit to fully cool down.

Operating Instructions



To use the induction hob, please see the instructions below:

1. Place the induction hob on a suitable heat resistant surface.
2. Connect the induction hob to your mains power supply.
3. Place a suitable pan/pot (See Recommended Pans/Pots) on the centre of the induction hob.

PLEASE NOTE: The Induction Hob will not heat up unless you place your pot or pan on top of the hob. See Troubleshoot/Error Messages.

1. Press the 'On/Off' button.
2. Set the power input by pressing the "Power" button and pressing the "Up" or "Down" button to adjust the power setting (see "Selecting Your Power Input").
3. Then, press the "Temperature" button and set the desired temperature by pressing "Up" or "Down". The temperature range can be set between 60oC to 270oC (see table 1). Once both temperature and power input have been set, set the timer to up to 3 hours. Once the timer reaches its end, the induction hob will go into standby mode and the heating element will turn off.
4. To turn off the induction hob during cooking, press the "On/Off" button for the unit to go into standby mode. Once in standby mode, and you are no longer going to use the hob, allow for the unit to cool down for 15 minutes before disconnecting the appliance from the mains.

WARNING: You must allow for the unit to cool for 15 minutes before disconnecting from the mains.

Please Note: When the product goes into standby mode, you will hear the built-in fan working to cool down the product. Once the unit has cooled down, and there has been a period of inactivity, the product will auto shut off. Alternatively, when the product is in standby mode, you can switch off the product by disconnecting the unit from the mains power supply after you have allowed the product to cool down for 15 minutes.

Temperature Ranges (°C) | 60 | 90 | 120 | 160 | 180 | 200 | 220 | 240 | 270 |

Selecting your power input

This unit gives you 9 power input settings from 300W to 2000W. This feature makes it ideal for operating the unit in locations where there is a low wattage power supply (e.g. caravan/motorhome parks) or if you want to use the hob via a power inverter which converts your vehicle's 12V DC battery into a 230V AC power supply.

Please note, when selecting a lower power input, it will take longer for the induction hob to fully heat up.

Table 2 below shows you the 9 power input settings:

Power Input Settings (Watts) | 300 | 500 | 800 | 1000 | 1200 | 1400 | 1600 | 1800 | 2000 |


Recommended Pans/Pots

The following pots/pans are suitable for use with the induction hob.



IMPORTANT: Ensure the diameter of the pots and pans is between 12 to 26cm. Also, prior to use, please check suitability of pan/pot to see whether it is suitable for the unit.

WARNING: We highly advise AGAINST using the following pans/pots:

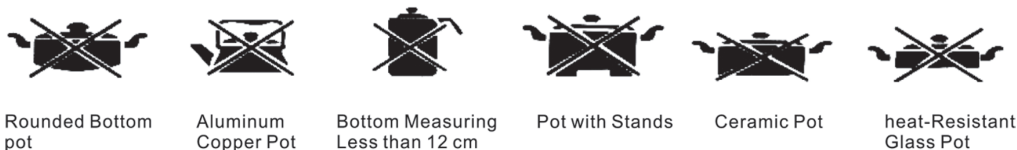

Troubleshoot/Error Messages

When the induction detects incorrect operation, the unit will display an error message in the form of an Error Code. Table 3 below outlines all the Error Codes along with an explanation to show you how to rectify the issue.

Error Code	Cause	Solution
E0	No cookware (i.e. pot or pan between 12cm to 26cm in diameter) is placed on the hob or the pot or pan is less than 12cm in diameter.	Place a suitable pan or pot on the centre of the hob. See recommended Pot/Pan
E1	Voltage is lower than 85V	Ensure voltage of power source is between 200 to 240V
E2	Voltage is higher than 275V	Ensure voltage of power source is between 200 to 240V
E3	Short circuit or surface sensor issue	Please contact technical support (see Technical Support)
E4	Surface temperature is over 280oC	Please check to see if the pot or pan you have placed on the hob has a flat bottom. If not, please use a suitable pan/pot. Allow the hob to cool before reuse.
E5	IGBT (insulated-gate bipolar transistor) temperature over 105oC, overheat protection	Ensure there is no blockage or obstruction on both the air inlet and air outlet on the unit. Also, check to see if the cooling fan is in working order.
E6	Short circuit or IGBT sensor issue	Please contact technical support (see Technical Support)

Technical Support

If you require any technical support, please contact us on support@streetwizeaccessories.com and provide the product name and supplier code (see Technical Specifications) along with the technical query and proof of purchase.

Technical Specification

Product Name	Leisurewize Induction Hob
Supplier Code	LW613
Power Input	300W to 2000W
Temperature Range	60oC to 270oC
Current	6A to 15A
Voltage	220V to 240V AC 50-60Hz



Please don't touch the hot surface after cooking!



Timer



Temperature



Down

2000



Up



Power



ON/OFF

Streetwize: Ashburton Road West, Trafford Park, Manchester, M17 1RY

For Product Support:

E: support@streetwizeaccessories.com

T: +44 (0)161 447 8597

For Trade Enquiries:

E: sales@streetwizeaccessories.com

T: +44 (0)161 447 8580

www.streetwizeaccessories.com



EU Registered Address:

Ace Supply Co (Europe) Ltd, 25 Herbert Place,
Dublin 2, D02 A098 Republic of Ireland.