

purely OUTDOORS COVERPRO

BREATHABLE CARAVAN COVER

CoverPRO - Caravan Cover Fitting Instructions



Important Safety Messages

Any material product needs to be protected from excessive force:

- Release pressure on zips when opening and closing by holding both sides level and straight. This will prevent excessive material strain or damage to the teeth of the zip.
- Do NOT over-tighten straps as this may cause damage to your cover.
- Do NOT attempt to fit the cover in windy conditions, as loose material can act like a sail.
- Do NOT use your caravan's heating system with the cover fitted.
- Do NOT attempt to tow your caravan with the cover fitted.

Before fitting your COVERPRO Caravan Cover:

- Remember to wind down or close any windows or roof-lights.
- Activate the handbrake on your caravan and wind down corner steadys for stability.
- Remove, fold away or cover any sharp or fragile objects, such as aerials, on the exterior of your caravan to avoid damage to both them and the cover.
- Make sure that any fridges or heaters or vented items are turned off completely.
- It is preferable, but not essential, that the cover is fitted to a dry caravan.
- Your caravan exterior MUST be clean. In the wind, the friction caused by dust and dirt particles can leave scratch marks.
- Flapping material in the wind can cause damage to the caravan paintwork. Please make sure the cover is fastened correctly to ensure a good fit, and that all straps are adjusted and tensioned.
- No caravan cover is recommended for use in extremely exposed locations or gale force wind.

Fitting your Caravan Cover:

Two people and the careful use of stepladders or a platform will be required as the cover is bulky and needs to be passed carefully over all sections of your caravan.

1. Carefully unfold the cover and make sure the white inner layer is to the inside, next to the caravan.
2. Open the back two zips of the cover and, holding the cover on either side of the caravan at the front, pass the cover over the roof, towards the rear, lifting the cover carefully over roof lights, windows and other protruding objects. If necessary, unzip all four corner zips to aid fitting.
3. Adjust the cover's position on the caravan until the seams are aligned, and an even fit all over is achieved.
4. Close the zips carefully, pulling both sides together gently to alleviate the pressure on the zip as it is pulled.
5. Pass each strap under your caravan and secure to the corresponding buckle on the opposite side.
6. Join the straps and matching buckles at the front and back to ensure a good fit.
7. Adjust all straps as required to give a good fit.

Care of your Caravan Cover:

- Allow the cover to dry completely before storing in the bag provided.
- Brush off any loose dirt or dust. Remove more engrained dirt with a soft sponge and warm water.
- Do NOT machine wash or tumble dry this cover.
- Do NOT use detergent.
- Do NOT expose this cover to sparks, flames or other sources of ignition.
- Roll the dry cover carefully and store in its original bag, in a cool, dry area, ready for it's next use.

