


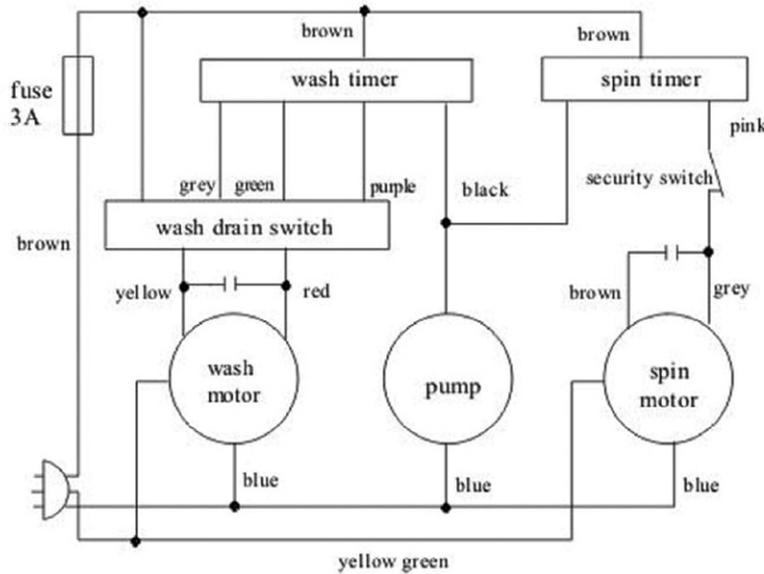

LWACC421

	Washing	Spinning
Rated voltage	220V	220V
Rated frequency	50Hz	50Hz
Rated energy consumption power	180W	120W



# Portawash PLUS

Portable Twin Tub WHIRLPOOL Washing Machine



**WARRANTY:** To validate the warranty on this product, please go to our web site and enter your details on the warranty screen. [www.streetwizeaccessories.com](http://www.streetwizeaccessories.com).



**Streetwize Accessories:**

Unit 1, Royce Trading Estate, Ashburton Road West,  
Trafford Park, Manchester M17 1RY

**Sales enquiries:** [sales@streetwizeaccessories.com](mailto:sales@streetwizeaccessories.com)

**Technical enquiries:** [support@streetwizeaccessories.com](mailto:support@streetwizeaccessories.com)

[www.streetwizeaccessories.com](http://www.streetwizeaccessories.com)

Please read these instructions carefully before operating this washing machine.

**Introduction to the product:**

Thank you for purchasing the PortawashPLUS. The design of this product has adopted the special patent technology of cabinet integration. The entire body casing is made of plastic and this ensures that your PortawashPLUS will never rust.

The novel safe formation of the washer is relatively lighter and space saving as compared to the general twin-tub washing machines.

Through integration of new technology, this washer with large wave pulsator and new waterflow will not only produce less twisting of the clothing but also better cleaning and washing effect. The functions of the water inlet, sprinkling, spin-dry and waterflow are also made available to save time, labour and water usage.

We trust that you will find the purchase of this PortawashPLUS to your satisfaction.

**Technical Specification:**

<b>Washing Capacity</b>	3.5KG
<b>Spinning Capacity</b>	2.5KG
<b>Washing Power</b>	280W
<b>Spinning Power</b>	140W
<b>Product Size</b>	595 × 360 × 680mm
<b>Washing noise level</b>	<69dB
<b>Spinning noise level</b>	<61dB
<b>N.W. / G.W.</b>	12.5/14KG
<b>AC220V</b>	50Hz- IPX4


**Troubleshooting:**

<b>TROUBLE</b>	<b>REASON</b>	<b>SOLUTION</b>
<b>Pulsator is working slow.</b>	Cut power or switch off machine.	Switch on the power.
	Transmission belt left off.	Assemble the transmission belt.
	Belt pulley is loose.	Tighten the belt.
	Pulsator blocked.	Remove the blockage.
<b>The pulsator does not rotate.</b>	Belt is loose.	Tighten or renew belt.
	The clothes in the spin dry tub is loose.	Tighten the belt and screw.
<b>Abnormal noise and vibration.</b>	The clothes in the spin dry tub are unbalanced.	Replace clothes in the tub.
	There is something jammed between pulsator and tub.	Remove the jammed item(s).
<b>Water leaks from the wash tub.</b>	Wash tub not connected tightly to the hose.	Reconnect and tighten hose.
<b>Spin dry basket does not rotate.</b>	The switch is in loose contact.	Adjust the contactor or the switch.
	The fixed screw of spin dry basket or shaft coupling is loose.	Tighten the screw.
	The shaft of the spin dry basket is entwined by the textile.	Remove the textile.
	Brake dragline is loose.	Tighten the dragline.
<b>The spin tub does not drain.</b>	Something has dropped into the space between spin tub and spin dry.	Remove the object.


**Attention: when the problem can not easily be solved, please contact our technical support team on +44 (0)161 447 8597.**

**Maintenance:**


After use, pull plug out to prevent accidents.

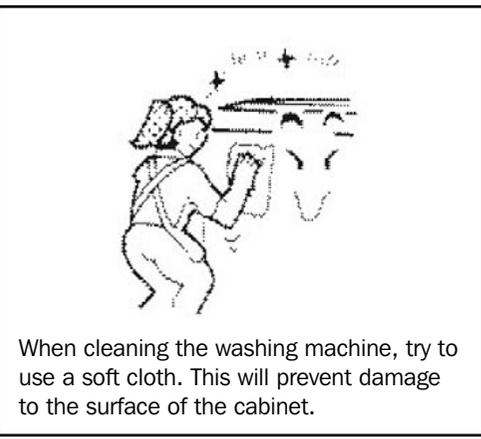


When cleaning the washing machine, try to use a soft cloth. This will prevent damage to the surface of the cabinet.

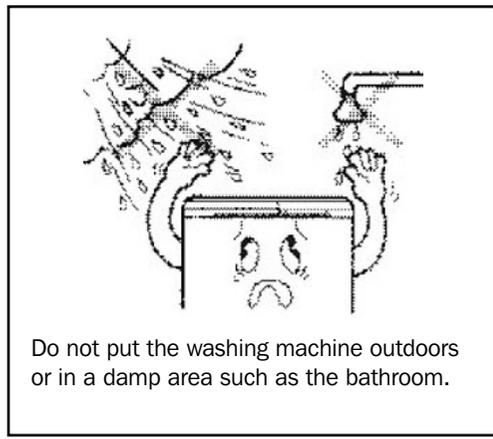

Do not put the washing machine outdoors or in a damp area such as the bathroom.

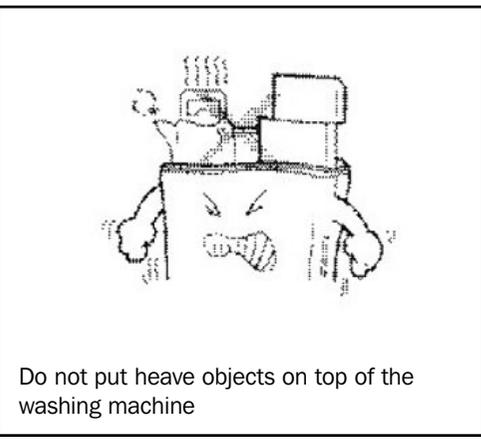


Do not put heavy objects on top of the washing machine

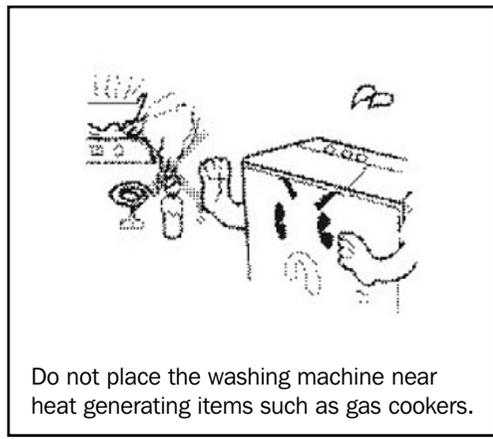

Do not place the washing machine near heat generating items such as gas cookers.

**Structure and parts of product:**

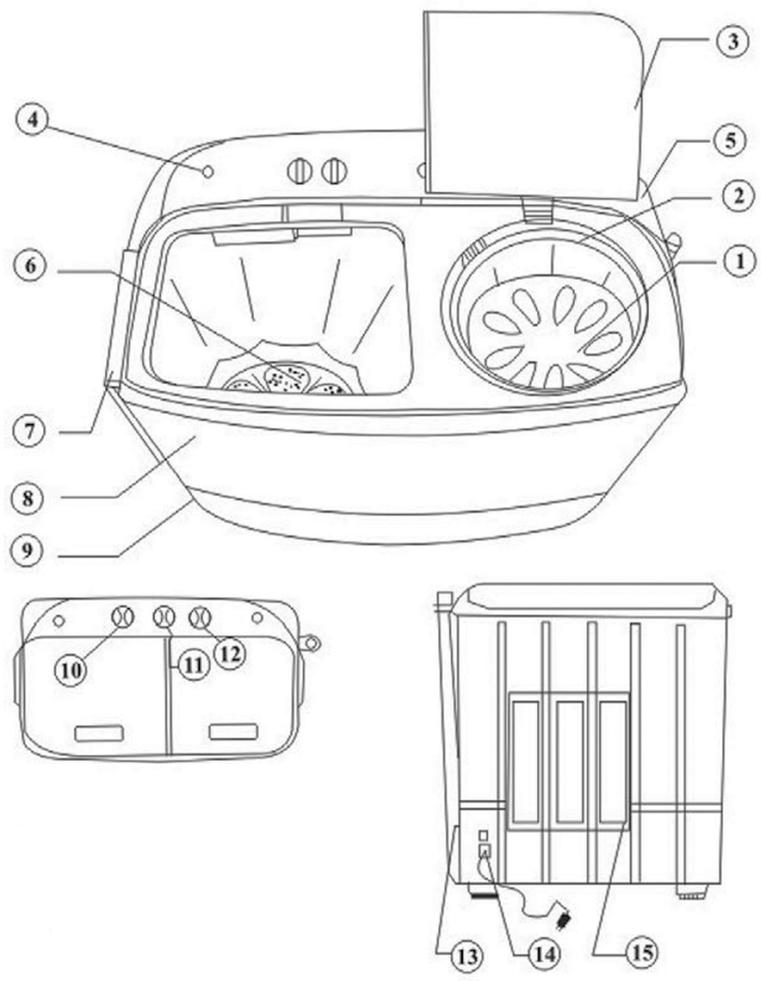

- 1** Spin cap
- 2** Spin tub
- 3** Spin cover
- 4** Water inlet
- 5** Control panel
- 6** Pulsator
- 7** Wash cover
- 8** Cabinet
- 9** Bottom
- 10** Wash timer switch
- 11** Wash & drain selector switch
- 12** Spin timer switch
- 13** Drain hose
- 14** Power wire
- 15** Back cover

**Washing Instructions:**

**Preparation**

1. The machine should be placed on flat ground.
2. Use the water inlet hose to connect the water tap to the water inlet.
3. Adjust the water level based on the type of clothing material and its weight.
4. Turn on the power.

**Washing**

1. Set the 'wash & drain selector switch' according to the material type and weight of clothes.
2. Set the 'wash & drain selector switch' to the wash position.
3. Set the 'wash timer' and place the clothes into the tub, adjust the water level to the proper position and put in the proper amount of detergent into the wash tub.
4. Set the 'wash timer' and the washing machine will start to wash.
5. After wash, set the 'wash & drain selector switch' to the drain position to start draining off water.

**Spinning**

1. Set the water inlet hose to the water inlet of the spin tub position for 20-30 seconds.
2. Set spin timer to 1min, repeat spin process if necessary.

**Rinsing**

1. After spinning, the spin tub will stop. Open the spin cover and from the spin tub transfer the clothes to the wash tub to prepare for rinsing.
2. Repeat the washing process but do not add any detergent.

**Attention Points:**

