

TECHNICAL SPECIFICATION

Mode no	LW603
Ignition method	Piezo-Electric
Dimensions (mm)	470 (W) x 540 (D) x 310 (H)
Weight (KG)	10
Safety device	Safety governor system / pressure sensitive safety device, flame failure device and limit temperature shut O.
Fuel consumption	100g/h (nominal)
Gas type	Butane
Injector size (mm)	0.42

WARRANTY

To validate the warranty on this product, please visit our website and click on the warranty button and enter your details www.streetwizeaccessories.com.

**Streetwize Accessories:**

Unit 1, Royce Trading Estate, Ashburton Road West,
Trafford Park, Manchester M17 1RY

Sales enquiries: sales@streetwizeaccessories.com

Technical enquiries: support@streetwizeaccessories.com

Telephone: +44 (0)161 447 8597

www.streetwizeaccessories.com


Porta Roast Plus



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE USE. FAMILIARISE YOURSELF WITH THE APPLIANCE BEFORE CONNECTING IT TO ITS GAS CONTAINER. IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE PROPERTY DAMAGE, INJURY OR DEATH. DO NOT MODIFY THIS APPLIANCE. THIS PRODUCT CAN ONLY BE USED OUTDOORS.

WARNING: ACCESSIBLE PARTS MAY BE VERY HOT. KEEP YOUNG CHILDREN AWAY AT ALL TIMES.

PRODUCT PARTS

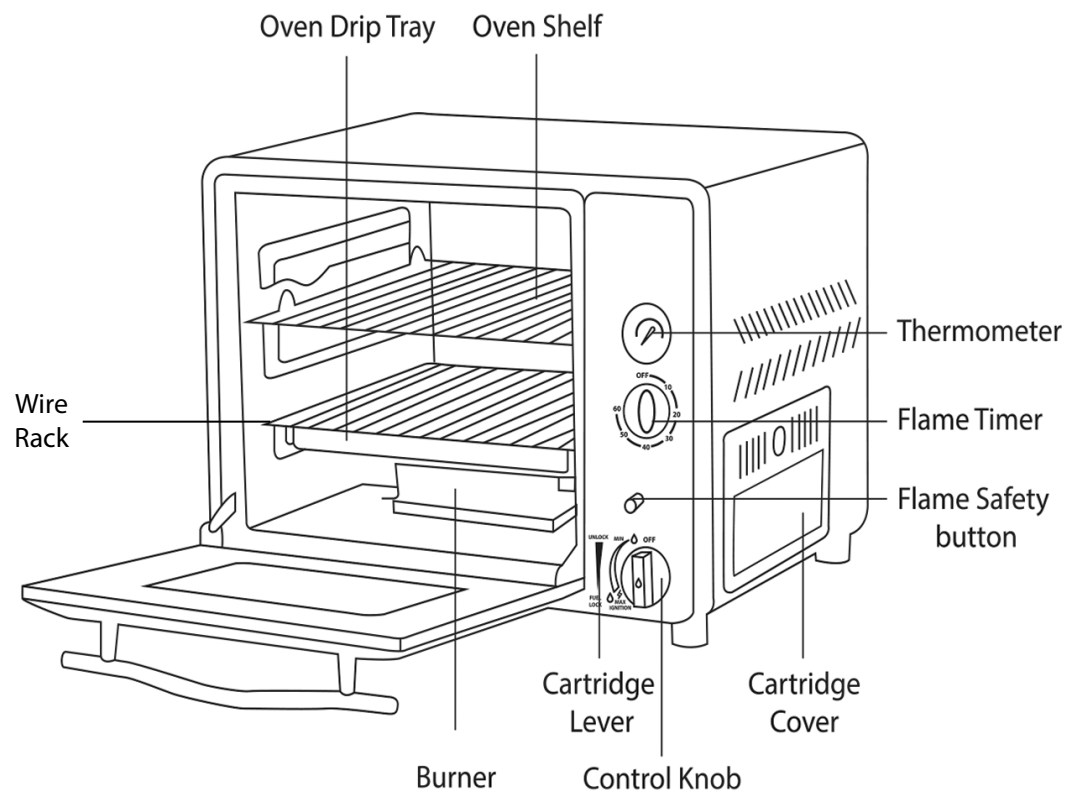

TROUBLE SHOOTING

PROBLEM \ CAUSE	No ignition	No burning	Unstable flame	Uneven flame	Slow burning	Gas smell	Flame extinguishes during use	SOLUTION
Lack of fuel	●	●			●		●	Renew cartridge
Spark point dirty	●							Carefully remove dirt
Dirty burner	●	●	●	●	●			Clean the burner
Imperfect cartridge alignment	●	●	●		●	●		Realign cartridge
Use of unsuitable fuel	●	●	●	●	●		●	Replace with cartridge containing correct fuel
Internal gas pressure too high	●						●	Cool down gas cartridge
Function of safety stop mechanism								Check and reset mechanism, may require 15 minute cooling period

If you are still experiencing difficulty with the appliance after trying the above solutions, the appliance should not be used until it has been inspected and repaired by a qualified person.

WARNING!


- Never put butane cartridges, aerosol cartridges, or any type of fuel container inside the oven compartment.
- Never put items such as briquettes or heat beads in the oven compartment.
- Do not use for any purpose other than cooking food.
- During use, parts may become very hot. Keep young children away.
- Switch cartridge lever to UNLOCK position when appliance is not in use.
- Do not store cartridge in cartridge compartment during transportation or storage.
- Fit nozzle cap back onto the cartridge nozzle and avoid accidental gas leakage if nozzle is bumped or depressed.
- Avoid boil overs and spillage.
- When hot, only handle the appliance by the control surfaces intended to be touched.
- Do not use as a space heater.
- Allow to cool before moving or handling.
- Remove all packaging before use. Do not operate oven in the carry bag (where included).
- CAUTION: Never obstruct the air openings or vents on this appliance.

PRESSURE SENSITIVE SAFETY DEVICE

If the oven is used in a hot area such as outdoors in direct sunlight or incorrectly (not in accordance with these instructions), the internal pressure of the cartridge will increase. If the pressure reaches a dangerous level, the in-built mechanical safety device will activate stopping the flow of gas and extinguishing the flame. If the in-built safety device activates more than once during a cooking session, discontinue further use of the oven until problem is resolved. The oven features a second safety device to shut off the flow of gas and extinguish the flame. If the second safety device is activated, the oven cannot be relit until it has cooled.

OPERATING INSTRUCTIONS

1. Turn the control knob to the OFF position. Make sure that the cartridge lever is in the UNLOCK position. If the gas knob is in the ON position, the cartridge cannot be put into place.
2. Open the cartridge cover and insert the gas cartridge. Make sure that the cartridge slot fits into the cartridge lever guide on the valve. **(CAUTION: Only use approved butane gas cartridge UL147B or EN417).**
3. When you are ready to use the oven, push the cartridge lever down to the FUEL-LOCK position. If a hissing sound or gas smell is evident, check that the cartridge is fitted correctly. Repeat step 2 to stop the gas leakage. **If lever is hard to push down, do not force it. Check that the cartridge is fitted correctly and the control is on the OFF position.**

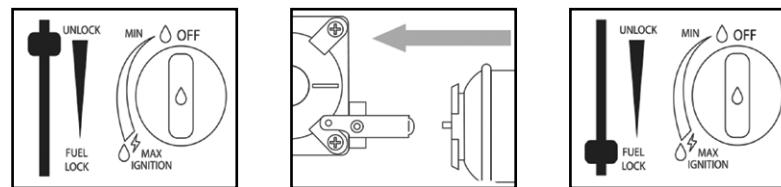

IGNITION


1. Open the oven door.
2. Set the oven timer to 10 minutes.
3. Press and hold the flame safety button.
4. Turn the control knob towards the IGNITION position until a click is heard from the Piezo igniter.
5. If ignition fails, turn the control knob back to the OFF position and repeat step 4.
6. Continue to hold the flame safety button for 15 seconds after the burner is alight. If you release the flame safety button too early, the safety mechanism will shut off the flame.

HEAT CONTROL

1. The control knob can be positioned on 'Maximum', 'Minimum', etc. Adjust it to the suitable position to control the temperature in the oven.
2. When turning the control knob from 'Maximum' to 'Minimum', turn slowly toward 'Minimum'.
3. Set the oven timer to the desired cooking time.

EXTINGUISHING

1. When you have finished cooking, turn the control knob to the OFF position. Confirm that the flame is completely extinguished.
2. Raise the cartridge lever to the UNLOCK position and take out the gas cartridge.
3. The oven timer will automatically shut off the burner when it returns to the ZERO / OFF position.

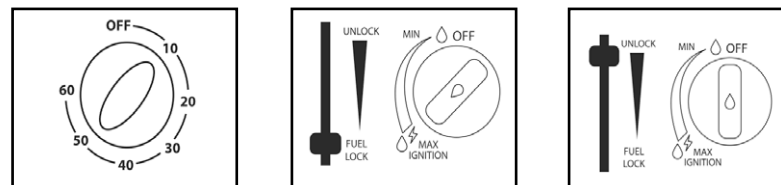

PRECAUTIONS

GAS CARTRIDGE

1. This appliance shall only be used with a butane cartridge certificate to UL147B or EN417. IT MAY BE HAZARDOUS TO ATTEMPT TO FIT OTHER TYPES OF GAS CARTRIDGES.
2. The cartridge should be placed away from flammable products or direct sunlight. Never keep cartridge in places where the temperature is over 50°C.
3. Do not subject the cartridge to impact or rough handling.
4. Cartridges must be stored outdoors in a well ventilated location out of reach of children.
5. Do not puncture or incinerate empty cartridges.
6. Avoid carrying cartridge in the boot of a car or any unventilated enclosure.
7. Gas cartridges should be changed in well ventilated location, preferably outside, away from people and any sources of ignition such as naked flames, electric heaters/equipment.
8. To check if gas cartridge contains gas, disconnect from the oven, then hold upright and shake from side to side. If you feel or can hear liquid movement, it contains gas.

OVEN





1. Check the seals between the appliance and the gas cartridge are in place and in good condition before connecting.
2. Do not use this appliance if it has damaged or worn seals.
3. Do not use this appliance if it is leaking, damaged or does not operate properly.
4. If there is a leak on your appliance (smell of gas) and you cannot stop the gas flow, remove the appliance to a well ventilated location away from any ignition source. Only check for leaks outdoors using a soapy water solution. Do not try to detect leaks using a flame.
5. This appliance must only be serviced by an authorised person.
6. Do not modify this appliance.

USE:

1. Do not use for any purpose other than cooking. Incorrect use may result in overheating, incomplete combustion and/or risk of fire or explosion.
2. In the event of a gas leak (smell of gas), immediately turn the control to the off position and move the cartridge lever to the unlock position to isolate the gas supply.
3. Do not move the appliance during operation.
4. The maximum cooking tray size is 285mm x 285mm.

PLACEMENT:

1. Do not use the oven in very windy conditions.
2. Do not place or use this appliance on any hot surface.
3. Do not use the oven under overhanging shelves.
4. Do not use close to combustible materials such as curtains. No combustible materials should be within 400mm from any side of or 1200 above the oven.

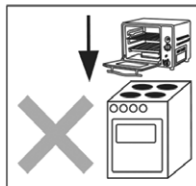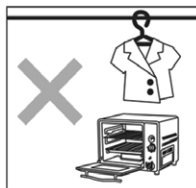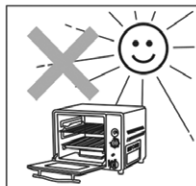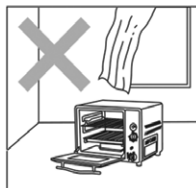

5. Use oven in shade or in cool places. Avoid using in direct sunlight.

6. Only operate this appliance on a flat horizontal surface to ensure the aeration opening below the oven is clear and unobstructed.

7. ONLY USE IN WELL VENTILATED AREAS: CARBON MONOXIDE HAZARD - USING THIS APPLIANCE IN AN ENCLOSED SPACE MAY CAUSE DEATH. DO NOT USE INSIDE CARAVANS, TENTS MARINE CRAFT, CARS, MOBILE HOMES OR SIMILAR LOCATIONS.

ABNORMAL OPERATION

ABNORMAL OPERATION CAN BE IDENTIFIED BY:

- Frequent activation of pressure safety device.
- Jamming of cartridge lock lever.
- Irregular burner flame which is yellow or unstable.
- Black sooting of cooking utensils.
- Refer to the trouble shooting section of this manual for possible solutions.
- If the oven does not operate properly, DO NOT use the appliance.

MAINTENANCE

PRECAUTIONS:

1. Make sure that the gas cartridge is released before cleaning.
2. Never remove safety devices or gas components.

CLEANING:

1. Body: wipe off with a clean-cloth. When necessary, use a kitchen cleanser and then finish with a dry cloth.
2. Drip tray, wire rack and oven shelf: after washing, wipe with a dry cloth.
3. Burner: clean the burner, burner ports, spark electrode and brass thermocouple with a hard brush.

