



LW569

EcoWasher Portable Washing Machine



Please READ & UNDERSTAND the instructions carefully before operating this device, and retain for future reference.

Washing load guidelines below are for larger items (shirts & small towels etc), more smaller items (underwear & socks) can be washed.

Load (pcs)	Water (% Full)	Detergent	Wash Time
1-2	1/4 load	1 tablespoon	1-2 Min
2-3	1/3 load	2 tablespoon	2-3 Mins
3-4	1/2 load (Max)	3 tablespoon	3-4 Mins

The EcoWash washing machine is suitable for washing lightweight laundry such as, T-shirts, & dress/work shirts, underwear, socks, small towels, mop etc.

ATTENTION: Only add water to the "Max" fill Level on the washing machine tub (blue part) when turning the handle take care not to over spin the basket, as this can result in water leakage from the tub.

THandle

- A) Pull the handle up a short distance to fold over for storage.
- B) Do not use the handle to carry the washing machine.

You can use water from cold to hot for washing (however NEVER use boiling water straight



Always use the EcoWash washing machine on a stable and flat surface. The EcoWash washing machine has suction feet on the base for added stability (so a smooth surface would be ideal).

SPECIFICATIONS:

Product Size: 350mm x 350mm x 343mm

Capacity: Washing up to 2 Ltrs of water + load.
Spin upto 2KG

Wash Time: 2-4 Mins (depending on load).

Spin Time: 15 seconds - 1 minute (depending on load).

Washing:

1. Sort the laundry into loads according to material type and/or colors.
2. Place the EcoWasher on a smooth, flat & stable surface.
3. Remove the lid by rotating to release the catches.
3. Add the required amount of water and detergent according to the washing chart overleaf.
4. Add the laundry and replace and secure the lid.
5. Have the handle in the upright position and turn it to wash. For best results, you can turn clockwise at 2 spins per second, to facilitate a good wash, turn the handle anti-clockwise at a similar speed, for as long as is necessary to wash the load.
6. After washing, remove the drain hose from storage hook and open the plug to drain the washing water in to a suitable receptacle or sink.

Rinsing:

1. Turn the handle to spin and drain excess washing water.
2. Put the plug in the drain hose and return to the storage hook, then refill the tub as before to rinse with clean water
3. Close and secure the lid, turn the machine handle for between 15 seconds to 1 minute to rinse the load, repeat if necessary.

Spinning:

1. Remove the drain hose from storage hook and open the plug to drain the rinsing water in to a suitable receptacle or sink. Replace the plug in the drain hose and return to the storage hook.
2. Turn the handle to spin the load to remove excess water, turn the handle faster. For best results, please hold the machine during this process with your other hand.
3. When spinning, if there is a shudder of the washing machine, slow down the handle spin speed. For best results it is advisable to open the washing machine and redistribute the load.
4. Drain excess water and ensure the unit is dry before storage.

Streetwise Accessories:

Unit 1, Royce Trading Estate, Ashburton Road West,
Trafford Park, Manchester M17 1RY

Sales enquiries: sales@streetwiseaccessories.com

Technical enquiries: support@streetwiseaccessories.com

www.streetwiseaccessories.com