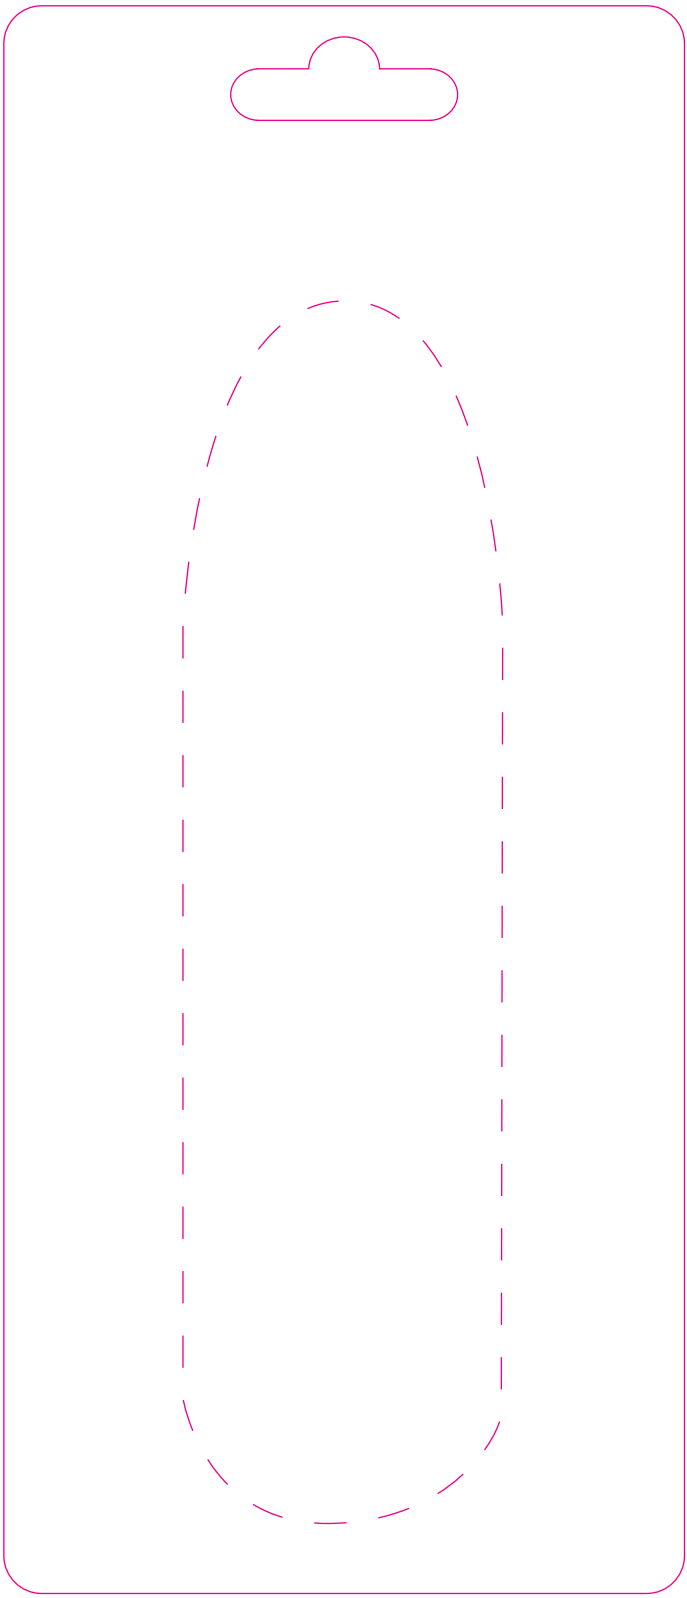

Car/Motorcycle

Digital Tyre Pressure Gauge

- *Accurate tyre pressures reduce tyre wear in-turn this improves fuel consumption.*
- *Quick & simple to use, complete with battery.*
- *Digital LCD reading (4-100 psi or 0.28-6.89 bar) with automatic shut off.*

SWDTG AW 2017.qxp_Layout 1 06/12/2017 11:49 Page 2

Specifications:

- Range: 4-100psi or 0.28-6.89 bar or 0.28-7.03kg/cm2 or 28.14-703.45kpa.
- Accuracy: +-1.5%.
- 1/4" LCD Display.
- Unit Change for psi, bar, kg/cm2 & kpa.
- Operating Temperature: 0-100˚F (-18ºC to +33ºC)
- Can be used for SUVs/Trucks - Motorcycles - Automobiles
- Includes Lithium Battery

Instructions:
Check the manufacturers recommended specifications for your tyre pressure rating.

- Press ON button. The message 8.8.8 will appear on the display along with 4 units: psi, bar, kg/cm2 and kpa.
- The next step will show the message 0.0psi or 0.00bar or 0.00kg/cm2 or 0 kpa.Now the ON botton can be pushed for unit changes (psi>bar>kg/cm2>kpa>psi).
- Place the gauge nozzle onto the tyre valve. Press firmly to ensure no air is escaping. Wait for 1-2 seconds, remove gauge nozzle from valve and note tyre pressure in LCD display. Repeat on other tyres.
- The display will remain illuminated with the pressure reading for about 20 seconds. Then the gauge will shut down automatically to save power.
- The gauge can be manually turned off by pressing the ON button for about 3 seconds. Note: You may continue to use the gauge even though the previous reading is still displayed.

Helpul Hints:

- If you observe an unusually low reading: Make sure no sound of escaping air can be heard. Also make sure you remove gauge from valve stem after reading locks on the display.
- If the tyre pressure is too high in any of the tyres, slowly release air by gently pressing on the the tyre valve with the edge of your tyre gauge.
- To clean the gauge, use a soft damp cloth. Do not immerse in or spray with water or other liquid cleaner.

Warning: For best results, check tyre pressures when the tyres are cold. Driving for prolonged high speeds can cause tyre pressures to rise. Taking pressure readings at this time can give you a false high reading.
Check tyre pressures at least once a week, and adjust air as necessary.
Consult your owners manual for the recommended pressure for your tyres.

THIS GAUGE IS INTENDED TO PROVIDE A GUIDE TO HELP DETERMINE A DROP IN PRESSURE IN YOUR TYRES.ONLY SOPHISTICATED AND REGULARLY CALIBRATED MEASURING EQUIPMENT CAN PROVIDE TOTALLY ACCURATE READINGS.

Streetwize Accessories:
Unit 1, Royce Trading Estate,
Ashburton Road West, Trafford Park,
Manchester M17 1RY

Sales enquiries:
sales@streetwizeaccessories.com

Technical enquiries:
support@streetwizeaccessories.com
www.streetwizeaccessories.com

SWDTG

5 026637 608506