


Heavy Duty Parking Post Fitting Instructions:

Post measurements
 Diameter: 55mm Height: 600mm
 Base plate - 130mm x 110mm
 Bolt hole size - 14mm x 3




Bolt Types: Choose the correct bolts for the surface you are fitting the parking post to ie: concrete/tarmac. These are NOT included but can be purchased from any DIY store. Check diameter of bolts required.

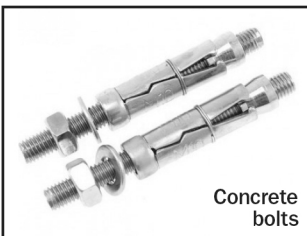

Concrete bolts



Tarmac bolts

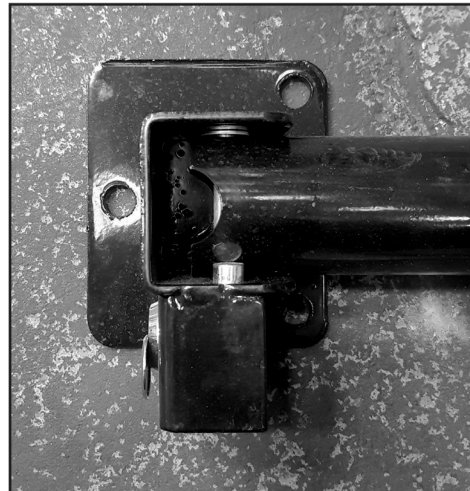

1. Measure hole spacing in bottom plate of parking post. Mark and drill holes in floor where be fitting.



2. Lay post flat with base over holes and use correct bolts to secure in place then erect post into standing position.



4. Line key with red dot marked on lock and turn fully clockwise to lock the parking post in position.



5. To lower the post back into a flat position, insert key and turn anti-clockwise. Post should unlock.

