



Guardian Hitch Lock

SWTT125


1: Please remove the hitch Lock from the packaging disposing of the packaging in a responsible manner.




2: Carefully remove the keys from the lock and unlock the padlock.




3: Remove the lock and slide out the securing bar.

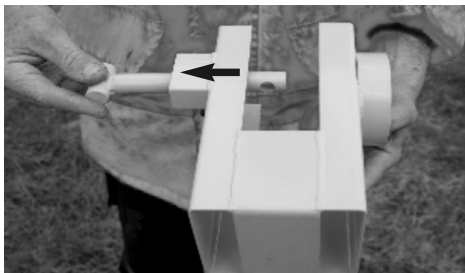

4: Align the hitch lock with the hitch and slide into place.

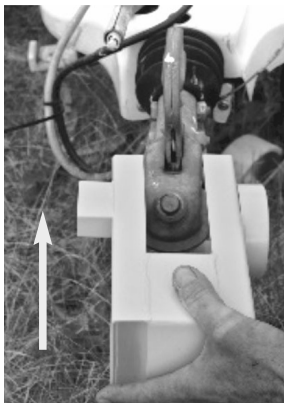

5: Once the hitch is fully inserted into the lock replace the securing bar.

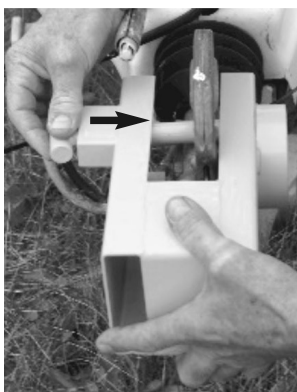

6: Sliding the securing bar all the way through the hitch lock replace the padlock and lock to secure.



Please note this Hitch Lock will not fit any hitch that has a stabilising mechanism or caravan/trailer hitches that are fitted with an Avonride hitch or Alko/Winterhoff stabilising hitches.

It will fit BPW hitches prior to January 2019

Please take care of the pad lock key as spares are not available for security reasons.

Streetwize Accessories:

Technical enquiries: support@streetwizeaccessories.com www.streetwizeaccessories.com

