



SWG18

Wireless Car Phone Charger Vent Fit



Read and understand these instructions before attempting any operation of this phone charger and retain for future reference!



Specification

Input:	5.0V-2.0A
Output:	5.0V-1.0A
Frequency:	110-205kHz
Charging Distance:	≤10mm
Conversion:	≥72%



Please Note:

If this product was purchased from ARGOS an additional 12V Power Plug with cable is included.

Mounting of wireless car charger

Place the ball end of the adjustable socket (A) into the holder on the back of the wireless car charger (B). Tighten securing nut (C) to fasten the holder to the charger.

To secure to a vent, simply push the vent bracket in to a gap in the air vent, whilst pulling on the spring loaded tab (D), as the bracket clicks



on the back edge of the vent, release tab (D) the spring will secure the unit on to the vent. The stabilizing arms (E) will press against the dash under the vent to ensure a stable fit.

To adjust the angle of the charger, undo screw adjustment (C) to adjust, then tighten to secure in correct position.




Charging for mobile phones (with Qi Technology)

Insert the 12V USB cable into the socket on the charger (F).

Insert the other end of the USB cable into a suitable 12V plug adaptor and connect this to the vehicle 12V power socket.

Press button (G) to open the arms of the holder (will fit devices from 60mm to 84mm). Squeeze arms together to grip the mobile phone for a strong secure fit of the device.

Ensure the Qi-technology is enabled on the mobile phone to begin charging (this will be indicated by the mobile phone showing the charging symbol).

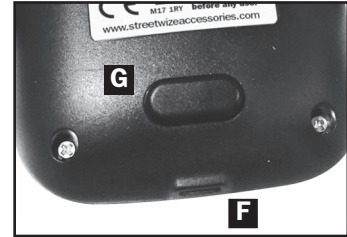

Safety Advice

DO NOT place the wireless charger in a position that may cause interference with the drivers view of the road.

DO NOT place in water or near fire, There are no serviceable parts DO NOT dismantle.

DO NOT use wireless charger in high temperature or humid conditions this may damage the circuits.

DO NOT place too close to any magnetic strips or chips on bank cards.

Please keep a minimum distance of 20cm between any implantable medical devices (such as Pacemakers and Cochlear implants) to avoid any potential interference with the devices.


It is advised to keep the chargers out of the reach of children.



Disposal and recycling

The equipment is supplied in packaging to prevent it from being damaged in transit. The box and recyclable materials in this packaging can be reused or recycled. Any plastic packaging must be disposed of in accordance with current local authority procedures.



The WEEE symbol  on this product means that the battery charger should be ethically dismantled or recycled to minimise environmental impact. Please check with your local authority for more information.

WARRANTY: To validate the warranty on this product, please go to our web site and enter your details on the warranty screen. www.streetwizeaccessories.com.

Streetwize Accessories: Unit 1, Royce Trading Estate,
Ashburton Road West, Trafford Park, Manchester M17 1RY

Sales enquiries: sales@streetwizeaccessories.com

Technical enquiries: support@streetwizeaccessories.com

Telephone: 0161 447 8597

www.streetwizeaccessories.com



M17 1RY