



# DC to AC Power Inverter

- 800 Watt Continuous Power
- 1600 Watt Peak Power



SWINV800

**CAUTION: THIS INVERTER IS FOR USE WITH 12V BATTERIES ONLY.**

Read these instructions before operating this power inverter and retain for future reference!



USER MANUAL FOR DC12V 800 WATTS POWER INVERTER  
Read before operating this equipment

---






USER MANUAL FOR DC12V 800 WATTS POWER INVERTER  
Read before operating this equipment

---

Your 800 watt power inverter converts 12-volt vehicle battery power into 230 volts of AC power. You can use the inverter in your vehicle to operate many types of appliances that use AC power such as TVs, VCRs, portable computers, power tools and lights for emergency use or camping use. The inverter works with your vehicle's engine turned on or off (accessory mode). It provides a continuous output of up to 800 watts.

#### BASIC OPERATION

- Use the right operating voltage for both input and output of the inverter.
- Connecting RED terminal from inverter to + of battery terminal and connect BLACK terminal from inverter to – of battery terminal.

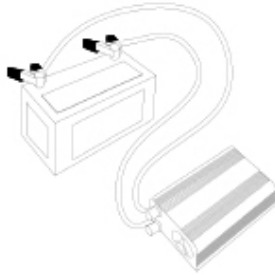

- Insert the plug of your appliances into AC socket at the front of the inverter.
- Turn ON the power switch that is located at the front of the inverter, and the green LED light will light as indicator that the unit at work.

#### RECOMMENDATION

- If the power inverter makes beeping sound, turn OFF the power inverter and disconnect all appliances from inverter and disconnect the inverter from the power supply. The beeping sound is simply the low battery warning, which indicates that the voltage of the battery power supply is getting low. Please restart the vehicle engine before operating the power inverter.
- When you are not using the inverter, turn the switch to OFF and disconnect the inverter from the power supply.
- Disconnect the inverter when starting the vehicle's engine.

#### BATTERY USE

TO avoid over-discharging your vehicle's battery, you should run your engine for 10-20 minutes to recharge the vehicle's battery after 2-3 hours of operating the inverter.

If you choose to connect the vehicle directly to your battery terminals, it is important to connect with right polarity (Connect + from inverter to + of battery terminal and connect – from inverter to – of battery terminal)





USER MANUAL FOR DC12V 800 WATTS POWER INVERTER  
Read before operating this equipment


CAUTION:

THE FOLLOWINGS OPERATION WILL DAMAGE THE UNIT:

- REVERSE POLARITY BY CONNECTING THE WIRES TO THE INCORRECT TERMINALS.
- CONNECTING THE BATTERY CHARGER TO REPLENISH BATTERY WITHOUT DISCONNECTING THE INVERTER FIRST.
- CONNECTING THE INVERTER TO POWER SOURCE GREATER THAN 15- VOLT DC.

MEASURING THE AC VOLTAGE

The output waveform of the AC output is a MODIFIED SINE WAVE. To measure the AC output voltage, you must have a TRUE RMS VOLTMETER.

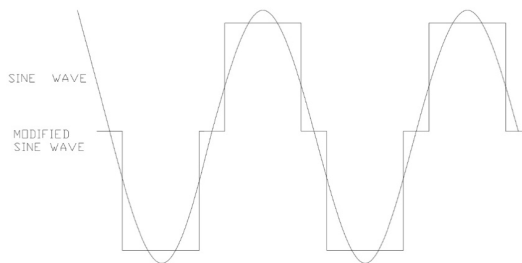

SAFETY PRECAUTION

The high voltage inside the unit is the same type of power as our electrical outlets at home.

Do not let the cord of the inverter or any appliance's cord get wet.

Do not operate the inverter in or around water. The voltage of the unit makes electrical shock hazard if operated in wet conditions.

Do not connect the AC inverter directly to another AC power source.

Allow at least 1 inch of clearance around the inverter for airflow.

If you operate the inverter in a moving vehicle, you need to secure the inverter to prevent it from shifting around while the vehicle is moving.

If there is anything wrong with the inverter, disconnect from 12V power supply.

**BEFORE ANY OTHER TROUBLE SHOOTING, ALWAYS CHECK THE FUSES AND REPLACE IF NECESSARY.**






USER MANUAL FOR DC12V 800 WATTS POWER INVERTER  
Read before operating this equipment

### TROUBLE SHOOTING

TROUBLE/INDICATION	POSSIBLE CAUSE	SUGGESTED REMEDY
No AC output-the Green LED light is not on	•DC input below 10 Volts	•Recharge or replace battery
No AC output -- inverter is cold	Poor connect with the battery.	• Disconnect load from inverter. Reconnect the unit to the battery terminals.
Shut down after operating for a long time	•Over-temperature	• Disconnect the inverter and put aside for 15mins to cool down the unit.
Red LED light &/or audible beeping.	Fuse could have been blown	Check ALL the fuses and replace if necessary.

#### TO CHECK THE FUSES

Disconnect the inverter from the power supply. Loosen and remove the screws on the base of unit, remove the base plate to reveal inside the inverter. Locate the fuses as indicated opposite, check and replace if necessary.

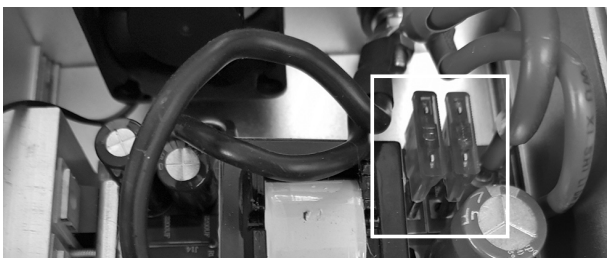

#### MAINTENANCE

Very little maintenance is required to keep the inverter operating properly.

#### DESCRIPTION

1600W Peak power- Allow you to power appliances that require a large amount of initial power to work (such as many TVs and motor-power equipments).

Low Battery alarm- the inverter sounds and audible alarm then turns itself off if the source battery becomes too low.

Auto shutdown/reset protection--- the inverter temporarily shuts itself down to protect itself from overheating.

Overload/Short Circuit Protection--- the inverter automatically turns itself off if the connected load is too high or if it shorts.

AC Outlet—allows you to power AC appliances.

#### HEAT DISPERSAL - CAUTION

The inverter generates heat while it is working. This is not a malfunction. However, if the inverter gets too hot while working, it will turn off by itself.

Position the inverter where air flows freely around it to allow the heat to disperse.

The inverter's thermal protection prevents it from operating when its temperature exceeds 140+/-9 °F (60+/-5 °C).





USER MANUAL FOR DC12V 800 WATTS POWER INVERTER  
Read before operating this equipment

SPECIFICATION

Name	Description
Input	12V(10-15V) DC
Output	230VAC
Output frequency	50Hz
Output waveform	Modified Sine Wave
Continuous power	800 watts
Surge power	1600 watts
With USB output	DC5V 500mA
Best efficiency	Approx. 90%
No load current	<0.5A
Battery low shutdown	10+/-0.5V DC
Battery low alarm	11+/-0.5V DC
Thermal shutdown	140+/-9°F (60+/-5°C)
Product dimension	23X14.8X6CM





USER MANUAL FOR DC12V 800 WATTS POWER INVERTER  
Read before operating this equipment

---






**WARRANTY:** The 12 month warranty on this product will need to be activated within 30 days of purchase, please go to our web site and click on the “Warranty” link and enter your details on the warranty screen. [www.streetwizeaccessories.com](http://www.streetwizeaccessories.com).

## Disposal and recycling

The equipment is supplied in packaging to prevent it from being damaged in transit. The box and recyclable materials in this packaging can be reused or recycled. Any plastic packaging must be disposed of in accordance with current local authority procedures.



The WEEE symbol  on this product means that the battery charger should be ethically dismantled or recycled to minimise environmental impact. Please check with your local authority for more information.



**FOR USE ONLY IN A COVERED ENVIRONMENT**

### Important:

#### Additional Safety Information

This DC to AC Power Inverter is NOT intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been given instruction concerning use of the DC to AC Power Inverter by a person responsible for their safety.



M17 1RY

#### **Streetwize Accessories:**

Unit 1, Royce Trading Estate, Ashburton Road West,  
Trafford Park, Manchester M17 1RY

**Sales enquiries:** [sales@streetwizeaccessories.com](mailto:sales@streetwizeaccessories.com)

**Technical enquiries:** [support@streetwizeaccessories.com](mailto:support@streetwizeaccessories.com)

**Telephone:** 0161 447 8597

[www.streetwizeaccessories.com](http://www.streetwizeaccessories.com)